

EN: ALARMIA – USER MANUAL

PRODUCT OVERVIEW

ALARMIA is a rechargeable personal alarm device designed to provide an audible alarm and flashing LED light when activated. It features two alarm modes: Alarm Latch Mode and Vibration Alarm Mode.

PRODUCT SPECIFICATIONS

Product name: ALARMIA

Model number: PA300

Alarm modes: Alarm Latch Mode and Vibration Alarm Mode

Battery: Li-ion 3.7 V, 150 mAh, 0.555 Wh

Charging method: USB Type-C

Input rating: 5V $\overline{=}$ 1A

Charging time: 2 hours

Alarm duration: 1 hour


Illumination duration: 1 hour

Flashing duration: 2 hours

Product dimensions: 90 × 30 × 12.5 mm

Product weight: 25 g


PARTS AND CONTROLS

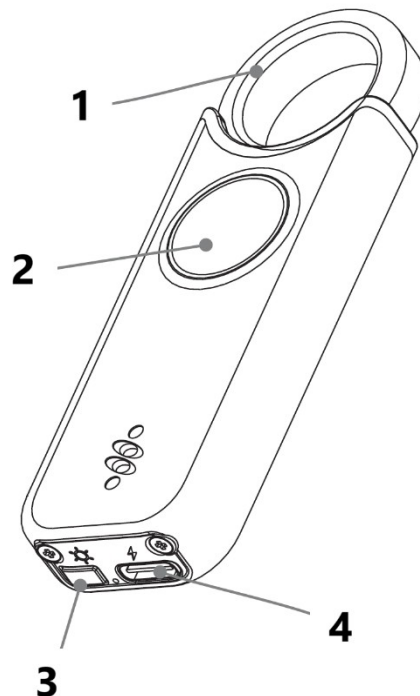

1. Alarm latch
2. LED Light
3. LED light button
4. USB Type-C charging port


ALARM MODES

Alarm Latch Mode

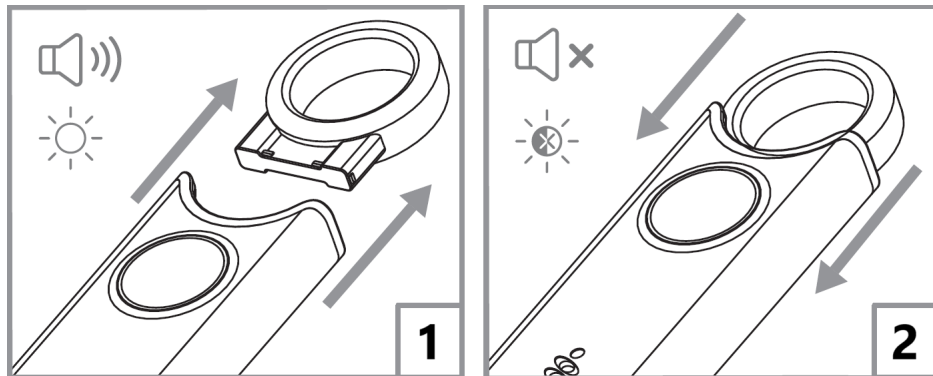

1. Pull the **alarm latch** to activate the alarm. The LED light will flash at the same time.
2. To stop the alarm, reinsert the latch into the device.

Vibration Alarm Mode

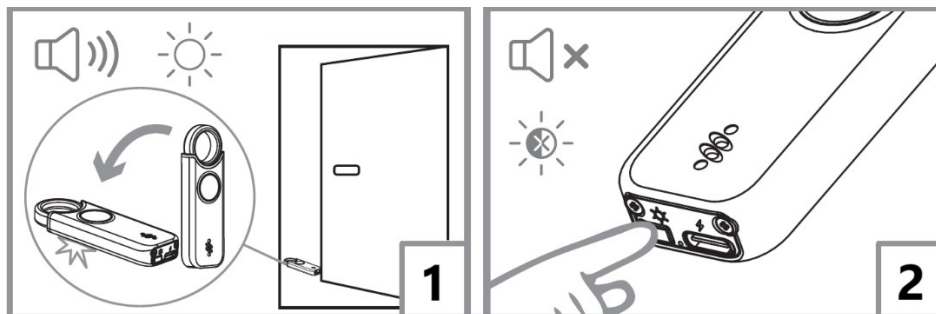

1. Press and hold the **LED light button** for approximately 3 seconds to activate Vibration Alarm Mode. The vibration sensing function will become active after approximately 10 seconds.
2. The alarm will be triggered when the device detects vibration or movement.
3. Press the **LED light button** to stop the alarm.

CHARGING

Connect a compatible USB Type-C charging cable to the USB Type-C port on the device and connect the other end to a suitable USB power source. The charging time is approximately 2 hours. Disconnect the charging cable after charging is complete.

LED LIGHT

The LED light flashes when the alarm is activated. The LED light button is also used to activate Vibration Alarm Mode and to stop the alarm when it has been triggered.

BASIC SAFETY INSTRUCTIONS

- Keep the device away from water and excessive moisture unless the product is specifically rated as water-resistant.

- Do not expose the device to excessive heat, direct sunlight for prolonged periods, or open flames.
 - Do not disassemble, modify, or attempt to repair the device yourself.
 - Do not puncture, crush, or otherwise damage the built-in rechargeable battery.
 - Use a suitable USB power source for charging the device.
 - Stop using the device if the housing, charging port, battery, or other components show signs of damage.
 - Keep the device out of reach of young children when not in use.
 - The personal alarm is intended as an alerting and deterrent device. It does not guarantee protection against personal injury or prevent an incident from occurring.
-

CLEANING AND STORAGE

Keep the device clean and dry. Clean the exterior with a soft, dry or slightly damp cloth. Do not use abrasive cleaners, solvents, or immerse the device in water. Store the device in a cool, dry place when not in use.

INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.