

EN: ALERTOLOCK – USER MANUAL

Product Introduction

Thank you for choosing **ALERTOLOCK**. This motorcycle disc brake lock combines a durable mechanical lock with a built-in 110 dB alarm to help deter theft. The lock automatically arms after locking and emits a loud alarm if tampering is detected.

Please read this manual carefully before use and keep it for future reference.

PRODUCT SPECIFICATIONS

Model Number: PC1409

Power Supply: DC 9 V (from battery)


Battery Type: 6 × LR44 alkaline batteries (not included)

Alarm Volume: 110 dB

Package Contents:

- 1 × ALERTOLOCK Alarm Disc Lock
- 1 × Reminder Spring Cable
- 2 × Keys

OPERATING INSTRUCTIONS

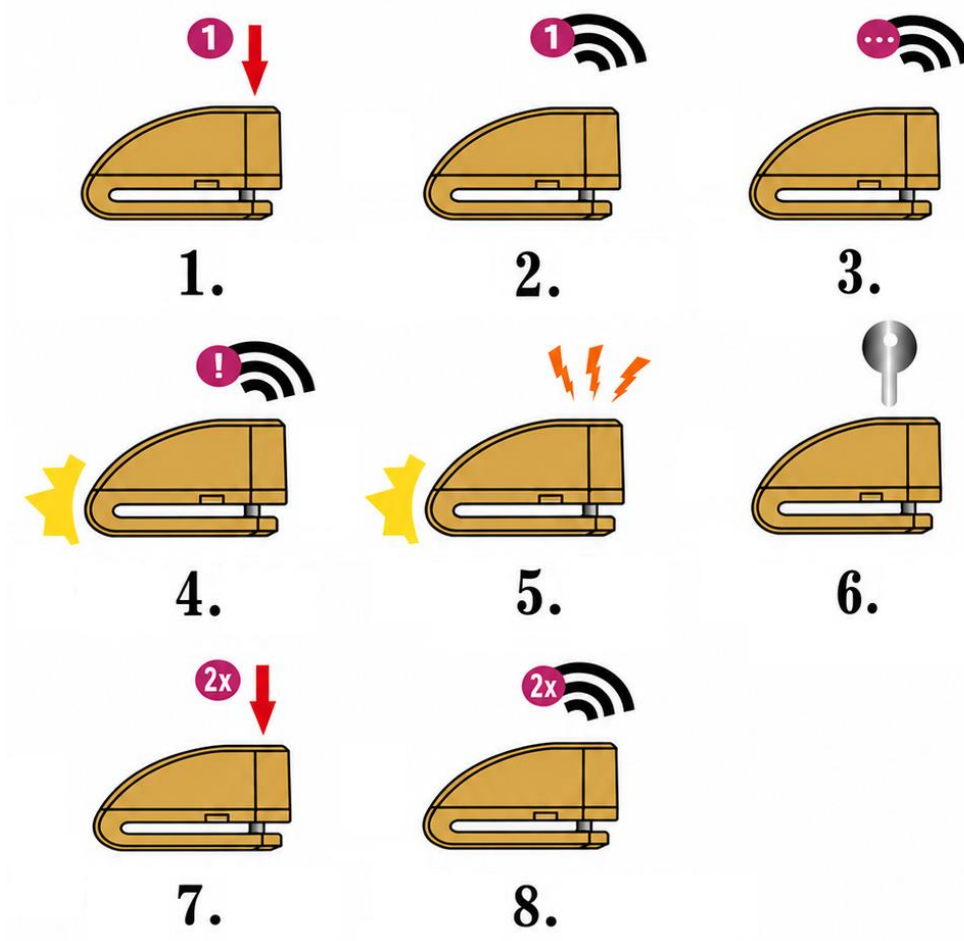

1. **To activate the alarm mode**, press the lock cylinder (key barrel) down until it locks.
 2. You will hear a short "**beep**", indicating that the alarm function is switched on.
 3. After approximately 3 seconds, you will hear a second, longer "**beep**", indicating that the alarm is fully armed.
 4. If the lock detects movement or tampering, it will first emit a short warning sound.
 5. If tampering continues, the lock will activate its **110 dB alarm** for approximately 10 seconds. The alarm will automatically reset and continue monitoring. If movement continues, the alarm will sound again.
 6. To disarm the alarm, simply unlock the disc lock using the supplied key.
 7. To disable the alarm function without unlocking the lock, press the lock cylinder **twice within 3 seconds** after locking.
 8. You will hear **two short beeps ("beep-beep")**, confirming that the alarm function has been turned off.
-

BATTERY REPLACEMENT


Important: Keep this manual and the supplied spanner in a safe place. They will be needed when replacing the batteries.



1.



2.

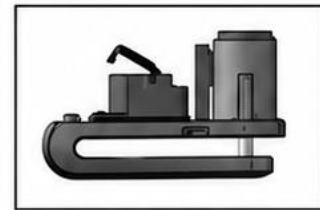

3.

1. Unscrew the battery compartment screws.
 2. Remove the battery compartment cover.
 3. Replace all **6 LR44 batteries**, ensuring the correct polarity is observed, then reinstall the cover and tighten the screws securely.
-

SAFETY NOTES

- Always ensure the lock is fully engaged through the brake disc before leaving your motorcycle unattended.
 - Use the supplied reminder spring cable to help prevent riding away while the disc lock is still installed.
 - Replace all batteries at the same time. Do not mix old and new batteries or different battery types.
 - Remove the batteries if the lock will not be used for an extended period.
 - Keep the lock clean and dry. Lubricate the lock cylinder periodically with a suitable lock lubricant if necessary.
 - Keep the keys in a safe place. Replacement keys may not be readily available.
-

INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.