

EN: AUTOCLIP – USER MANUAL

PRODUCT SPECIFICATIONS

Model Number: JLL7501

Input Rating: DC 5V / 1A (USB Charging)

Battery Specification: 3.7V, 220mAh, 0.81Wh

Rated Power: 2W

GEAR MODES

Gear 1 – Low Speed Mode

Suitable for babies and young children aged 0–3 years for gentle nail polishing and smoothing.

Gear 2 – Medium Speed Mode

Suitable for adults and regular nail trimming or polishing.

Gear 3 – High Speed Mode

Suitable for thicker, harder, or tougher nails requiring stronger polishing performance.

USAGE INSTRUCTIONS

1. Gently touch the power button to turn on the device in Gear 1 (Low Speed Mode). The white LED light will illuminate simultaneously.
 2. Short-press the power button again to switch to Gear 2 (Medium Speed Mode).
 3. Short-press the power button once more to activate Gear 3 (High Speed Mode).
 4. To smooth and round the edges of the nail, place the tip of the fingernail perpendicular to the polishing head and move the device gently along the nail edge.
 5. For nail surface polishing, position the nail surface parallel to the polishing head. Move the polishing head slowly and gently across the nail surface to achieve a smooth finish.
 6. Do not use the edge of the polishing head directly against the nail surface, as this may scratch or damage the nail.
 7. Short-press the power button again to turn off the device. The LED light will turn off simultaneously.
 8. During charging, the bottom indicator light will flash. The indicator light will remain steadily lit once the battery is fully charged.
-

PRECAUTIONS

1. This product is designed for fingernail care only. Do not use it on other parts of the body.
2. Do not charge the device in humid or wet environments. Ensure the charging port is completely dry before charging.
3. Use only a 5V / 1A USB power adapter or compatible USB power source for charging.
4. When connecting or disconnecting the charging cable, hold the plug itself. Do not pull directly on the cable.
5. Do not attempt to disassemble, modify, or repair the product yourself.

6. This product is not recommended for use by young children or individuals with reduced physical, sensory, or cognitive abilities without proper supervision.
7. The device contains a built-in rechargeable battery. Do not expose the product to fire, excessive heat, direct sunlight, or high-temperature environments.
8. If the product will not be used for an extended period, recharge it at least once every 1–2 months to maintain battery performance.
9. Before disposing of the product, the built-in battery must be removed and disposed of according to local regulations. Ensure the device is powered off before battery removal.
10. Keep the device clean after use. Remove nail dust regularly to maintain optimal performance and hygiene.
11. Store the product in a cool, dry place away from moisture, dust, and direct sunlight.

INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.