


Product Model:JHTOY-169 Importer: HS PLUS d.o.o Gmajna 8,1236 Trzin, Slovenia Manufacturer: Zhejiang Jiahe Toys Co., Ltd. Address: No. 97-1, Xinchang road, Bailong shan street, Yunhe country, Lishui city, Zhejiang, China










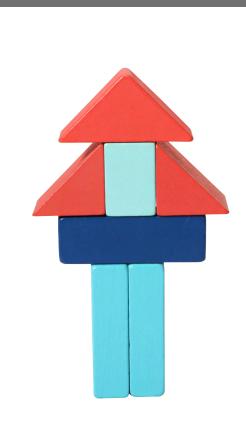

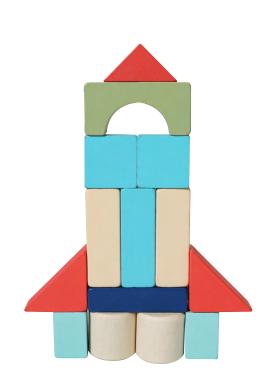
















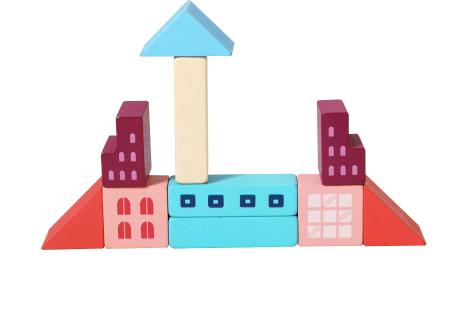
































WARNINGS AND SAFETY INSTRUCTIONS

- Carefully read and follow all instructions provided before using the toy. Failure to do so may result in injury. • Pay attention to warning labels and symbols on the toy. These may indicate specific safety precautions or • Only allow children within the specified age range to use the toy. Small parts may pose a choking hazard to
- younger children. • Always supervise children during playtime, especially if the toy has small parts, strings, or involves water • Please ensure that your child's playing environment is well lit, non-slippery and devoid of sharp objects or
- edges. Regularly inspect the playing area and remove small objects that could pose a choking hazard. • Teach children about the proper and safe use of electrical toys. Emphasize the importance of following instructions and not modifying the toy. • Inspect the toy for any damage before each use. Do not use if parts are broken, loose, or missing.
- Clean the toy regularly according to the provided instructions. Ensure that it is in good condition for safe play. • Store the toy in a safe and dry place when not in use. Keep it away from direct sunlight, heat sources, and • Warning: Dispose of packaging materials immediately and keep them out of reach of children. Plastic bags
- and ties can pose a suffocation risk. • Caution: Use the toy only for intended purposes. Do not use it on any uneven surfaces.



 
includes small parts which may pose a choking risk if ingested. Not Children must be under adult




To avoid danger of suffocation, keep the packaging bag away from babies and children. Do not use this bag in cribs, beds, strollers or play pens. A declaration by the manufacturer that the product

WARNINGS AND SAFETY INSTRUCTIONS

  - Carefully read and follow all instructions provided before using the toy. Failure to do so may result in injury. • Pay attention to warning labels and symbols on the toy. These may indicate specific safety precautions or • Only allow children within the specified age range to use the toy. Small parts may pose a choking hazard to
- younger children. • Always supervise children during playtime, especially if the toy has small parts, strings, or involves water
- Please ensure that your child's playing environment is well lit, non-slippery and devoid of sharp objects or edges. Regularly inspect the playing area and remove small objects that could pose a choking hazard.
- Teach children about the proper and safe use of electrical toys. Emphasize the importance of following instructions and not modifying the toy. • Inspect the toy for any damage before each use. Do not use if parts are broken, loose, or missing. • Clean the toy regularly according to the provided instructions. Ensure that it is in good condition for safe play.
- Store the toy in a safe and dry place when not in use. Keep it away from direct sunlight, heat sources, and Warning: Dispose of packaging materials immediately and keep them out of reach of children. Plastic bags and ties can pose a suffocation risk.
- Caution: Use the toy only for intended purposes. Do not use it on any uneven surfaces.





WARNING! – THIS BAG IS NOT A TOY



