

EN: CAMDETE – USER MANUAL

Camera Detector – 2nd Generation

Please read these instructions carefully before using the product. Keep this manual for future reference.

PRODUCT SPECIFICATIONS


Product Name: CAMDETE

Model Number: S22

Material: ABS + PC + Silicone

Power Supply: 3.7V / 0.2A

PRODUCT OVERVIEW

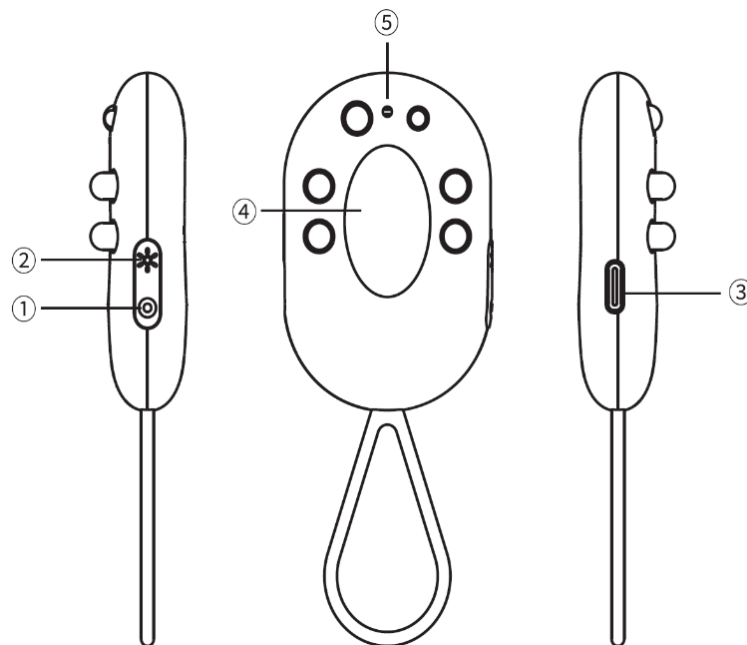

1. Hidden Camera Detection Button
2. Flashlight & Vibration Alarm Button
3. USB Type-C Charging Port
4. Red Light Filter Lens
5. Indicator Light

Indicator Light Status

- **Low Battery:** Red light flashes rapidly
- **Charging:** Red light flashes slowly
- **Fully Charged:** Red light remains steady

USER INSTRUCTIONS

Hidden Camera Detection Mode

Use this mode to locate hidden cameras in your surroundings.

Look through the red filter lens while scanning the room. If a hidden camera is present, it will appear as a bright red reflection.

- Press and hold **Button (1)** to turn the device on or off.
- Short press **Button (1)** to switch between detection modes:
 - **Level 1:** Steady red light
 - **Level 2:** Flashing red light

If the red light continues flashing for 10 seconds, **infrared (IR) detection mode** will activate. In this mode, the device emits a sound alert when it detects night vision cameras.

Distance-based alert signals:

- **Long distance (~6 m):** Beep every 300 ms
- **Medium distance (~3 m):** Beep every 100 ms
- **Short distance (<3 m):** Continuous sound

Vibration Alarm Mode

This mode is designed to alert you to movement or intrusion.

Hang the device on a door or window handle.

- Press and hold **Button (2)** to turn this mode on or off.
- After activation, the device will emit a 10-second countdown sound.
- Once armed, it will trigger a loud alarm if vibration is detected.

Note: This mode will automatically deactivate if any button is pressed during operation or while the alarm is sounding.

Flashlight Mode

Short press **Button (2)** to turn the flashlight on or off.

IMPORTANT USER NOTES

1. For best detection results, keep the room as dark as possible. Strong sunlight or bright lighting may cause false reflections.
2. The device cannot be powered on when the battery level is too low. Recharge before use.
3. Only one function can operate at a time. Please activate each mode individually as needed.
4. The device will automatically power off after 3 minutes of inactivity when not charging.

5. Avoid pointing the detector directly at reflective surfaces (e.g., mirrors, glass) as this may affect detection accuracy.

INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.