

EN: CAMERIK – USER MANUAL

Dear Customer,

Thank you very much for purchasing our product. This quick-start guide is designed to help you understand the basic functions and installation process of the device. Please read this manual carefully before use to ensure proper operation.

READ BEFORE USE

1. When purchasing the recorder, a memory card may already be inserted into the TF card slot. Before first use, please format the memory card through the device menu to ensure proper functionality.
2. Before final installation, connect both the power cable and the rear camera to test the system. Ensure that all components are functioning correctly prior to mounting them permanently, to avoid issues after installation.
3. The built-in battery of this product is only used for saving settings and maintaining system data. It is not intended for standalone operation. The device must always be connected to a power source during use.
4. Due to the high data processing requirements of this device, please use a genuine Class 10 or higher-speed memory card. It is recommended to use memory cards with a capacity of up to 64 GB. Using low-quality or incompatible cards may result in system errors, freezing, or recording failures.
5. If the device becomes unresponsive, freezes, or displays a “file error” message, remove the memory card, restart the device, and reformat the card if necessary.
6. Do not modify the power cable or rear camera cable. To avoid damage, overheating, or malfunction, always use the original power supply accessories. For 24-hour parking monitoring functionality, a dedicated hardwire kit is required and must be purchased separately.
7. If the recorded image is unclear, check whether the protective film on the lens has been removed. If necessary, gently clean the lens with a soft, dry cloth.

Warm Reminder: Press the “OK” (Confirm) button during recording to pause the current video. While paused, you can access and adjust the settings menu.

Please note:

The recorder uses continuous (loop) recording. It is recommended to format the memory card regularly using the device settings. Always use a high-speed Class 10 memory card, preferably with a capacity of 32 GB or higher. For best performance and reliability, use original or certified accessories.


INSTALLATION METHOD

Front Camera

To ensure safe and tidy installation, use cable clips to secure the power cord and prevent interference while driving. For optimal recording performance, it is recommended to install the device as close to the rearview mirror as possible.

1. Mount the dash camera securely on the windshield.

2. Connect the power cable to the device and route the cable along the edge between the windshield and the vehicle ceiling.
3. Guide the power cable down along the interior trim.
4. Route the cable through the door seal toward the lower dashboard area.
5. Continue routing the cable along the bottom edge of the dashboard toward the cigarette lighter socket, and insert the power plug into the 12V socket.

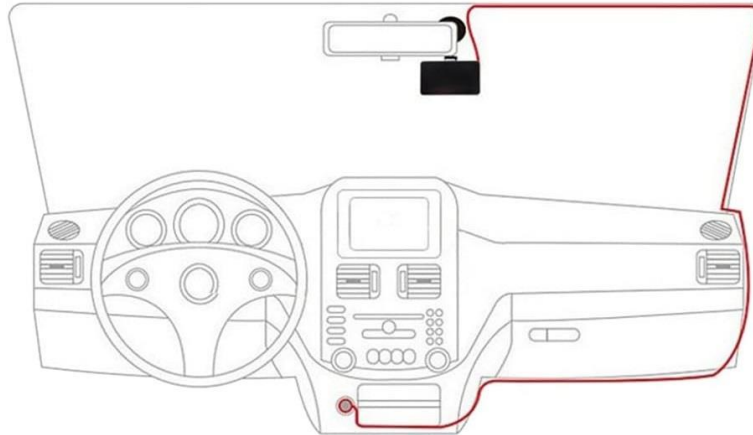

FRONT CAMERA OVERVIEW



1. HD Lens
2. Infrared Light
3. Power Switch
4. Menu Button

5. Up Button
6. OK Button
7. Down Button
8. Infrared Light
9. Secondary HD Lens
10. Mounting Bracket
11. Speaker
12. Lens Assembly
13. Reset Button
14. Type-C Port / AV Input / Mounting Slot / TF Card Slot

BACK CAMERA



1. Rear Camera Position Option 1
2. Rear Camera Position Option 2

Connect the positive (+) wire of the rear camera to the reversing light to enable automatic switching to the rear view when reversing.

Warning: Due to differences between vehicle models, professional installation is strongly recommended. The provided instructions are for reference only. Improper installation may result in device damage or malfunction.

REAR CAMERA CONNECTOR OVERVIEW



1. Camera Connector
2. Connection to Reversing Light Positive (+)
3. Main Unit Connector
4. Rear View Camera

PRODUCT USE

- **Time Setting:** Press the OK button to pause recording, then press the Menu (M) button twice to enter the settings menu. Use the arrow buttons to locate “Time Setting,” then press the confirmation button to enter the adjustment screen. Use the arrow buttons to adjust the time values. Press the confirmation button to move to the next setting field. Once complete, save and exit the settings.
- **Video Playback:** Press the OK button to pause recording. Press the photo button once to capture a still image. Press the photo button twice to enter playback mode. Use the arrow buttons to browse recorded files and select a video. Press the confirmation button to play or pause the selected video.
- **Memory Formatting:** Press the OK button to pause recording. Press the Menu (M) button twice to access the settings menu. Use the arrow buttons to find the “Format” option. Press the confirmation button to confirm and format the memory card.
- **Loop Recording Setup:** Press the OK button to pause recording. Press the Menu (M) button to enter the settings menu. Use the arrow buttons to locate the “Loop Recording” option. Press the confirmation button to select the desired recording interval.

INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.