

# EN: CHIRRCAT – USER MANUAL

## 3-Mode Flapping Wings Toy for Cats

Please read this manual carefully before using the product and keep it for future reference.

---

### PRODUCT SPECIFICATIONS

**Name:** CHIRRCAT

**Battery type:** Lithium-ion battery

**Battery voltage:** 3.7 V

**Battery capacity:** 300 mAh (1.11 Wh)

**Charging voltage:** 5 V / 1 A

**Fabric material:** Polyester

---

### BASIC SAFETY INSTRUCTIONS

- The internal mechanism that powers the toy is **not waterproof**. If the toy is exposed to water, the electronics may be damaged and the warranty will be void.
  - The toy contains a **rechargeable lithium battery**. Dispose of the battery and electronic components according to local regulations for electronic waste and batteries.
  - This toy is designed **for indoor use only**. Outdoor use may expose it to moisture and damage the internal mechanism.
  - Only insert **catnip that is sealed in a porous bag** (such as a tea bag) into the catnip pouch. Loose catnip may enter the mechanism and damage the electronics.
  - This product is **intended for pets only**. It is not a children's toy. Keep it out of reach of children except under adult supervision.
- 

### PRODUCT FEATURES


- Cute bird design made with **high-quality soft fabric** to attract and entertain cats.
  - **Paw-activated motion sensor** with realistic bird sounds.
  - **Three flapping wing movement modes** for interactive play.
  - **Refillable catnip pocket** to help stimulate and relax your cat.
  - Made from **soft and safe materials** suitable for biting and touching.
  - **Removable and replaceable outer cover** for easy charging and cleaning.
  - Optional **hook attachment** for use with a cat teaser toy.
- 

### PACKAGE CONTENTS

1. Bird toy (1×)
2. USB charging cable (1×)
3. User manual (1×)
4. Catnip bags (2×)
5. Hook (included only with some models) (1×)

---

## PRODUCT OVERVIEW

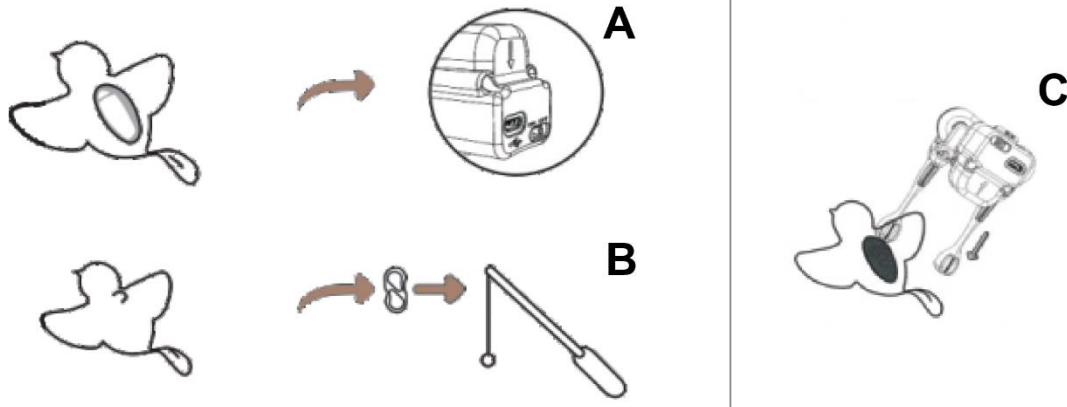

- A. On/Off switch
- B. Cat teaser attachment point (cat teaser not included)
- C. Removable internal mechanism

---

## CHARGING

Charge the toy fully before first use.


**Charging time:** approximately 1 hour

**Usage per charge:** up to 280 movement activations

### Indicator lights

- **Red:** Charging
- **Green:** Fully charged

### Charging interface

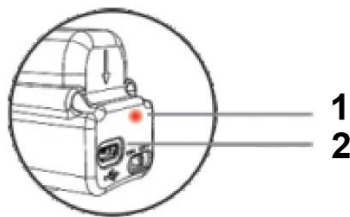

1. Charging indicator light
2. Micro USB charging port

---

## USE OF CATNIP

- Only use **catnip sealed in a porous bag** (such as a tea bag). Two catnip bags are included.
- Unzip the back of the toy.
- Insert the catnip bag into the **side pouch**.
- Close the zipper to secure the toy.

**Important:** Do not place **loose catnip** inside the toy, as this may damage the internal mechanism.

---

## OPERATION INSTRUCTIONS

1. Unzip the toy to access the internal mechanism.
2. Fully charge the toy using the provided USB cable until the LED indicator turns **green**.
3. Insert the catnip bag into the side pouch.
4. Move the switch to the **ON** position and close the zipper.
5. When the toy is touched or moved, the **motion sensor activates**, causing the wings to flap and cycle through the **three movement modes**.
6. The toy will automatically enter **rest mode** after the movement sequence ends.

The toy does not need to be switched off unless you want to prevent activation (for example, during the night).

**Optional:** Use the included hook to attach the toy to a **cat teaser rod** for interactive play with your pet. (*Cat teaser rod not included.*)

---

## CLEANING

Before cleaning the toy:

1. Turn the toy **off**.
2. **Remove the internal mechanism** from the fabric cover.

The outer cover can then be cleaned separately. Replacement covers may also be available.

---

**Note:** All photos and illustrations are for reference only. The actual product may vary slightly.

---

## INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.