

EN: CLEABRU – USER MANUAL

Electric Makeup Brush Cleaner & Dryer

Please read this manual carefully before using the product and retain it for future reference. Improper use may result in damage to the device or unsatisfactory cleaning results.

PRODUCT SPECIFICATIONS

Product name: CLEABRU Electric Brush Cleaner

Model: YZ-008

Power supply: USB (DC)

Input: 5V = 1A

Rated power: 6W

Product dimensions: 173 × 121 × 175 mm

Weight: 560 g

Rotation speed: 850 rpm

Materials: ABS, PC, TPE

PRODUCT OVERVIEW



1. Air-dry lid
 2. Air-dry button
 3. Cleaning switch (power/start)
 4. Cleaning cover
 5. Water tank (rinsing tank)
-

KEY FEATURES

- **LCD display:** Shows operating mode and timing
- **Smart touch controls:** Easy one-touch operation
- **Automatic cleaning cycle:** 5-minute periodic cleaning program
- **Adjustable air-drying time:** 2-hour and 5-hour drying modes

- **Bidirectional rotation:** Alternating rotation improves deep cleaning performance
 - **Multiple cleaning cycles:** For heavily soiled brushes
 - **Hands-free operation:** Fully automatic cleaning and drying
 - **Dry and wet separation design:** Prevents cross-contamination
 - **Universal brush holder:** Suitable for various brush sizes and types
-

FUNCTIONS



1. **Brush cleaning:** Removes makeup residue, oil, and dirt
 2. **Air drying:** Gently dries brushes without heat damage
 3. **Dry/wet separation:** Keeps electrical components protected from water
-

IMPORTANT SAFETY WARNINGS

1. **Do not immerse the device in water:** This product is not waterproof. Only the removable tank and accessories may come into contact with water.
 2. **Avoid strong magnetic environments:** Do not use near devices that generate strong electromagnetic fields.
 3. **Do not use corrosive liquids:** Avoid alcohol-based, acidic, or harsh chemical cleaners, as they may damage the product.
 4. **Keep out of reach of children:** This device is not a toy.
 5. **Avoid humid environments:** Do not store or use the device in excessively damp locations.
 6. **Do not disassemble:** Do not attempt to modify, open, or repair the product. Repairs must be carried out by qualified personnel.
 7. **Use proper power supply:** Only use a standard 5V USB power source.
 8. **Unplug after use:** Disconnect the device when not in use to prolong its lifespan.
-

OPERATING INSTRUCTIONS

Cleaning Process

1. **Connect power:** Plug the USB cable into a suitable power source.
2. **Fill the tank:** Add clean water to the indicated maximum level line.

3. **Add cleaning solution:** Add a small amount of mild brush cleanser or soap.
4. **Insert brushes:** Place makeup brushes securely into the holder.
5. **Start cleaning:** Press the cleaning switch to begin the automatic cleaning cycle.
6. **Rinse brushes:** After cleaning, remove brushes and rinse with clean water if necessary.
7. **Remove excess water:** Gently shake off water or blot brushes with a clean towel.

Drying Process

8. **Attach air-dry lid:** Place the brushes back into the holder and secure the lid.
9. **Select drying mode:** Press the air-dry button to choose 2-hour or 5-hour drying.
10. **Allow to dry completely:** Ensure brushes are fully dry before use or storage.

After Use

11. **Clean the tank:** Empty and rinse the water tank and cleaning components.
12. **Wipe the device:** Use a dry or slightly damp cloth to clean the exterior.



MAINTENANCE AND CARE

- **Regular cleaning:** Clean the tank and components after each use to prevent residue buildup.
- **Avoid water entry:** Do not allow water to enter the main body of the device.
- **Storage:** Store in a dry, cool place away from direct sunlight.
- **Inspection:** Regularly check the USB cable for damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not start	USB cable damaged	Replace the USB cable
	No power supply	Check USB connection and power source
	Internal damage	Contact manufacturer or authorized service
Brushes not fully clean	No cleaning solution used	Add suitable cleaning solution
	Brushes heavily soiled	Run an additional cleaning cycle
Device not drying properly	Incorrect drying mode selected	Select appropriate drying time (2H or 5H)
	Excess water on brushes	Remove excess water before drying

ADDITIONAL USAGE TIPS

- Use lukewarm water for better cleaning results.
- Do not overload the brush holder—ensure brushes have space to rotate freely.
- For best hygiene, clean brushes regularly (recommended: once per week for frequent use).
- Use gentle, non-abrasive cleaning solutions to preserve brush quality.

INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.