

EN: CLIPPKO – USER MANUAL

Portable Electric Nail Clipper & Polisher


Thank you for purchasing the CLIPPKO Portable Electric Nail Clipper & Polisher. Please read this user manual carefully before using the product and keep it for future reference.

CLIPPKO is a compact, rechargeable nail care device designed for trimming, shaping and polishing fingernails. It combines an electric nail clipper with a nail polishing function for convenient nail care at home or while travelling.

PACKAGE CONTENTS

- 1 × CLIPPKO Electric Nail Clipper & Polisher
- 1 × Type-C Charging Cable
- 1 × Cleaning Brush
- 1 × User Manual

PRODUCT OVERVIEW

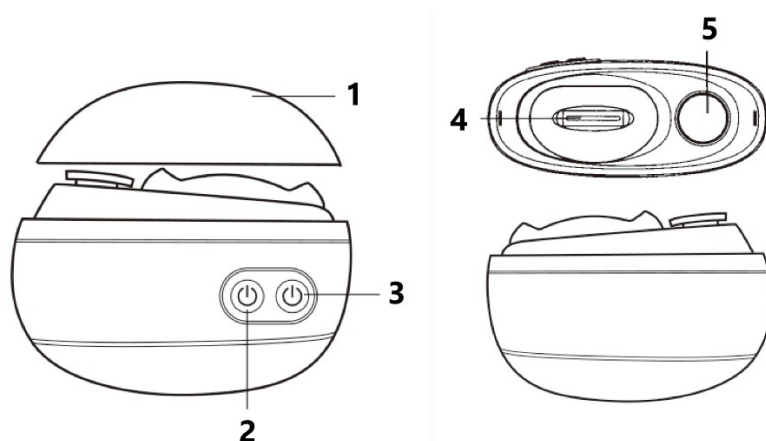

1. Protective Cap
2. Nail Polishing Button
3. Nail Clipping Button
4. Nail Clipper
5. Nail Polisher

The illustrations are for reference only. The actual product may vary slightly.

TECHNICAL SPECIFICATIONS

Product name: CLIPPKO

Model: JN-501

Battery: 3.7 V, 400 mAh, 1.48 Wh

Charging input: 5V $\overline{\text{---}}$ 1A

Rated input power: 5 W

BASIC SAFETY INSTRUCTIONS

WARNING! Keep the appliance dry!

1. Only charge the device using a suitable USB power adapter with an output of 5 V $\pm$ 1 A or a compatible power source. The charger must comply with applicable safety requirements.
2. Make sure the device and charging port are completely dry before charging. Do not charge the device if it is wet or has been exposed to water. Charging a wet device may cause electric shock, short-circuiting or fire.
3. Do not charge the device in direct sunlight or in high-temperature environments. Disconnect the charging cable once charging is complete.
4. Do not touch the USB charging port with wet hands or metallic objects.
5. This product is intended for use on fingernails only. Do not use it on any other part of the body.
6. Do not use the device if the skin around your nails is cut, irritated, inflamed or otherwise damaged.
7. Do not touch the blade directly, even when the device is switched off, to avoid injury.
8. Keep clothing, jewellery, hair and other objects away from the cutting head during operation to prevent them from becoming caught or damaging the device.
9. Store the appliance in a dry place, away from moisture and out of the reach of children.

IMPORTANT

Keep this manual for future reference. If the product is given to another person, make sure that this manual is provided with it.

NAIL CLIPPER OPERATION

1. Remove the transparent protective cap before use. Hold the device with the side containing the control buttons facing upwards and the nail collection compartment facing downwards.
2. Press and hold the **Nail Clipping Button** for approximately 1.5 seconds to switch the device on. The device starts at **Speed 1**. The green operation indicator and white illumination light will turn on.
3. Briefly press the **Nail Clipping Button** once to switch to **Speed 2**. Press the button again to switch the device off.
4. You can also press and hold the Nail Clipping Button for approximately 1.5 seconds while the device is operating to switch it off.
5. To switch from Nail Clipping Mode to Nail Polishing Mode, briefly press the **Nail Polishing Button** while the device is switched on.
6. Place your finger on the finger rest and position the nail carefully inside the nail-cutting opening.
7. Apply gentle, even pressure and slowly move your finger or the device so that the nail is trimmed gradually and evenly. Do not move the device too quickly or apply excessive force.
8. After use, switch the device off and remove any nail clippings from the collection compartment.
9. The device will automatically switch off after approximately 10 minutes of continuous operation.

NAIL POLISHER OPERATION

1. Remove the transparent protective cap before use. Hold the device with the side containing the control buttons facing upwards and the nail collection compartment facing downwards.
2. Press and hold the **Nail Polishing Button** for approximately 1.5 seconds to switch the device on. The device starts at **Speed 1**. The green operation indicator and white illumination light will turn on.
3. Briefly press the **Nail Polishing Button** once to switch to **Speed 2**. Press the button again to switch the device off.
4. You can also press and hold the Nail Polishing Button for approximately 1.5 seconds while the device is operating to switch it off.
5. To switch from Nail Polishing Mode to Nail Clipping Mode, briefly press the **Nail Clipping Button** while the device is switched on.

Shaping the Nail Tips

Hold the tip of the nail perpendicular to the polishing head. Gently move the polishing head along the edge of the nail to smooth and shape it.

Polishing the Nail Surface

Hold the flat surface of the nail parallel to the polishing head. Gently move the polishing head over the nail surface using slow, steady movements.

Do not use the sharp edge or corner of the polishing head directly against the nail, as this may scratch or damage the nail surface.

The device will automatically switch off after approximately 10 minutes of continuous operation.

STANDBY FUNCTION

After the device is switched off normally, the white and green indicator lights remain illuminated for approximately 30 seconds. During this standby period, briefly press either control button to switch the device back on.

CHARGING

1. Connect the Type-C charging cable to the charging port of the device.
 2. Connect the other end of the cable to a suitable USB power source with an output of 5 V $\pm$ 1 A.
 3. The indicator light will remain **RED** while the device is charging.
 4. The indicator light will change to **GREEN** when the battery is fully charged.
 5. Once charging is complete, disconnect the charging cable from the device and power source.
-

DIRECT USE WHILE CHARGING

The device supports operation while connected to a power source. If the battery is depleted, connect the device to a suitable power source and wait approximately 3–5 seconds before use.

Do not use the device while charging if the device, charging cable or charging port is wet or damaged.

CLEANING AND MAINTENANCE

1. Switch off the device and disconnect it from the charging cable before cleaning or performing maintenance.
 2. Use the supplied cleaning brush to remove nail clippings and debris from the cutting and polishing areas and other accessible parts of the device.
 3. Empty and clean the nail collection compartment regularly.
 4. Wipe the main body with a clean, soft, dry cloth.
 5. Do not immerse the main unit in water or rinse it under running water.
 6. Do not use corrosive or abrasive cleaning agents, gasoline, solvents or other chemicals to clean the device, as these may damage the housing or internal components.
 7. After cleaning, allow the device to dry completely before storing or using it.
 8. Store the device in a dry, well-ventilated place and keep it out of the reach of children.
-

TROUBLESHOOTING

Problem: The device does not switch on.

Possible cause 1: The battery is depleted.

Solution: Recharge the device before use.

Possible cause 2: The power button has not been pressed correctly.

Solution: Press and hold the appropriate Nail Clipping or Nail Polishing Button for approximately 1.5 seconds.

Possible cause 3: The device has malfunctioned.

Solution: Stop using the device and contact the appropriate after-sales service.

IMPORTANT

Keep this manual for future reference. If the product is given to another person, make sure that this manual is provided with it.

INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.