

WARNINGS AND SAFETY INSTRUCTIONS

- Read the whole manual carefully and keep it for future reference.
- Use only for intended purposes. Failure to follow user instructions may cause injury to the user or the product.
- This device is intended for household use only.
- This device can be used by children aged from 8 years and above as well as by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the device in a safe way and understand the hazards involved. Children should not play with the device. Cleaning and user maintenance should not be done by children unless they are older than 8 and supervised
- Avoid dropping the product on the floor or otherwise damaging it.
- Do not attempt any modification or repair by yourself and ensure that any repair is conducted only by appropriately qualified technician.
- Do not use this device when your hands are wet.
- When charging, gently insert or remove the charging cable to prevent damage to the port.
- Unplug the charging cable promptly after charging.
- Do not use or charge the product in high-temperature, high-humidity, excessively smoky, or dusty environments, such as bathrooms, steam rooms, or near open flames.
- Use the specified charger to avoid damaging the device. Improper charging can damage the device. Exceeding the maximum recommended power input may cause damage to the integrated battery, which could result in injuries to the user.
- Do not use attachments other than those supplied.
- Do not use the device outdoors.
- Do not submerge in water or expose to liquids or moisture. Keep the product away from high-temperature environments.
- **CHOKING HAZARD:** Keep this device out of reach of children.
- **SHOCK HAZARD:** The proximity of water presents a hazard even when the device is switched off.
- DO NOT modify, disassemble, puncture, cut or incinerate the battery. DO NOT solder directly onto the battery, expose it to high temperatures, try to modify it or remove it from the product. In case of battery breach, dispose of the product appropriately and immediately.
- Please make sure to place the product on fire-proof surfaces, as to minimize the possibility of battery breach.
- **SAFETY INSTRUCTIONS IN AN EVENT OF BATTERY BREACH:** If exposed to battery electrolyte, flush with water, immediately and/or immediately contact emergency services. If case the electrolyte comes into contact with your eyes, flush with water for 15 minutes, and immediately seek medical attention.
- Use a dry or lightly moist, soft cloth when cleaning this device. Do not clean this device with abrasive chemicals and do not submerge it in water or other liquids.
- Regularly inspect wires, plug shells, and other components for damage. If you notice any damage, stop using the product immediately and have it repaired by a professional service. Regular maintenance helps reduce battery aging and swelling.
- This product is not a toy! To avoid the risk of fire, burns, electric shock or other injuries, store and place the product out of reach of children.
- Do not use this device if it is not working properly, has been dropped, has signs of physical damage, has been left outdoors or has come into contact with water.

INSTRUCTIONS FOR RECYCLING AND DISPOSAL



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.