

EN: DINODREAM – USER MANUAL

PRODUCT SPECIFICATIONS

Product Name: Dinosaur Egg Night Light Projector 2.0

Product Model: WH-E27

Product Size: 11.8 × 11.8 × 13.8 cm

Specification: Bluetooth Type


Battery Capacity: 1200 mAh

Input Voltage: 5V = 1A

Rated Power: 5W MAX (3 × 1W LED modules)

PACKAGING CONTENTS


1. Projector Lamp Base (1×)
2. Projector Lampshade (1×)
3. Transparent Cylinder (1×)
4. Transparent Cylinder Lid (1×)
5. Rectangular Projection Films (6×)
6. Round Projection Films (6×)
7. Type-C USB Charging Cable (1×)
8. User Manual (1×)

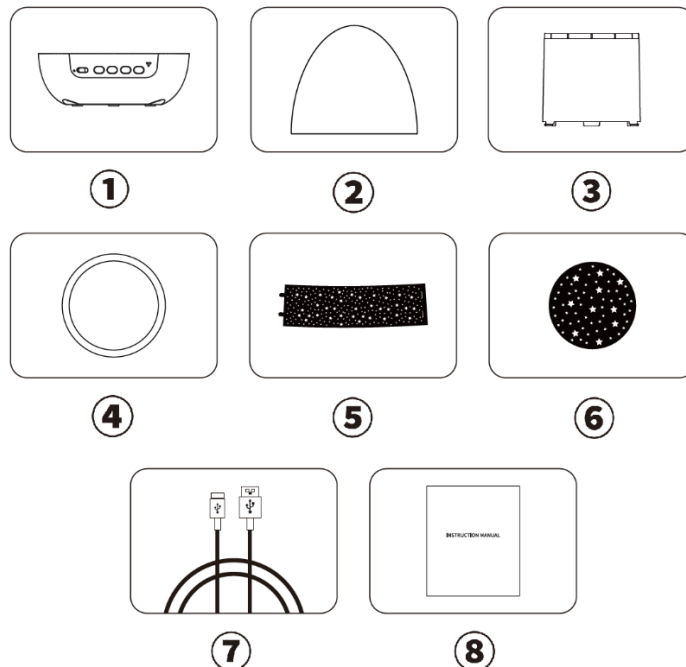

PRODUCT BUTTONS OVERVIEW


1. ON/OFF Button
2. Bluetooth Button
3. Light Color Switching Button

4. Rotation Button
5. Charging Indicator
6. Type-C Charging Port

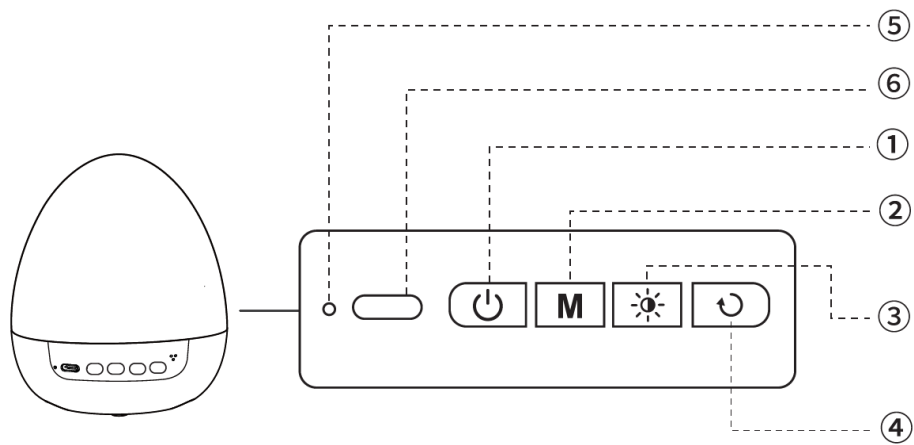


USER INSTRUCTION

Procedure for Changing Projection Films

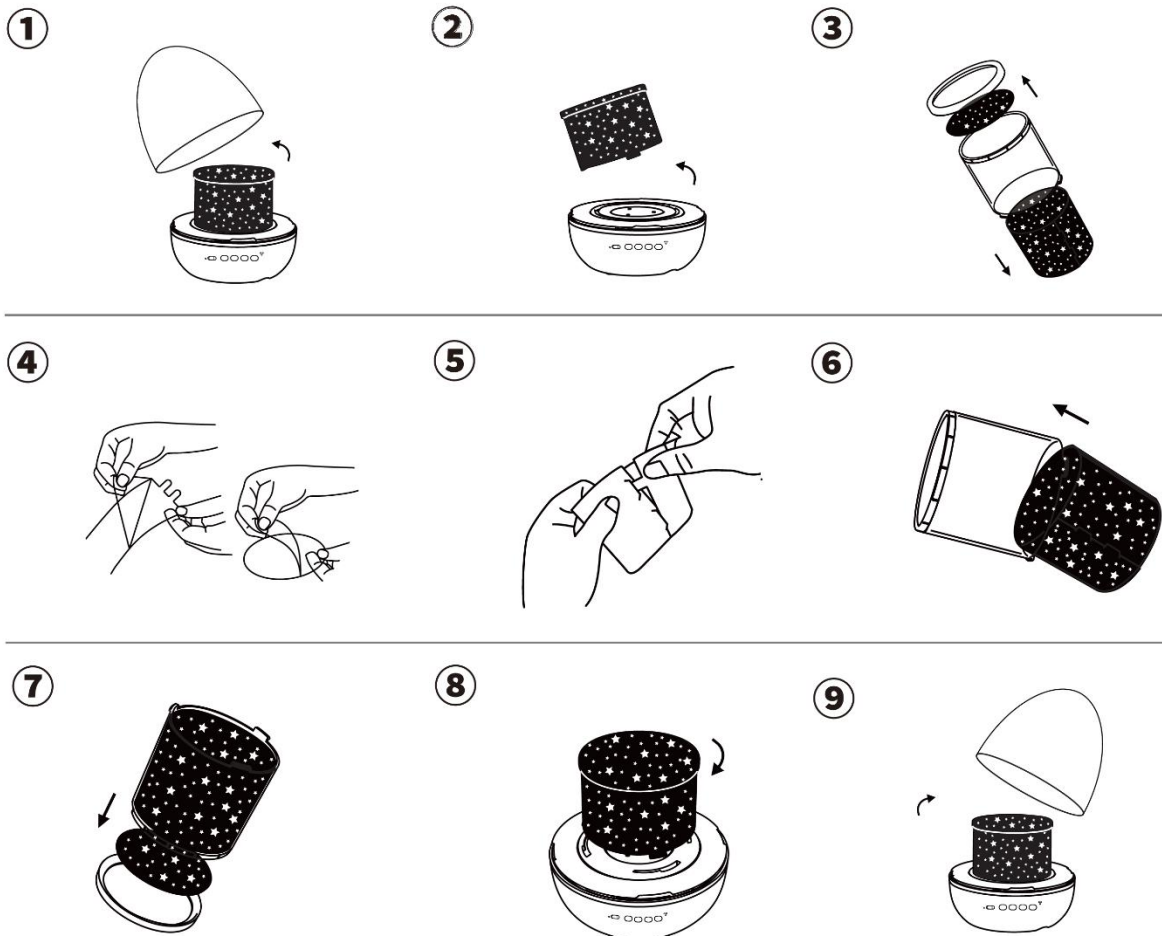

1. Remove the projector lampshade by rotating it counterclockwise.
2. Remove the transparent cylinder in the middle of the product by rotating it counterclockwise.
3. Open the transparent lid of the cylinder. Then remove the rectangular projection film inside the cylinder and the round projection film inside the lid.
4. Remove the protective film from the new round and rectangular projection films.
5. Roll the rectangular film into shape and secure it properly.
6. Insert the rolled rectangular film into the transparent cylinder.
7. Place the new round projection film into the transparent lid, then close the lid onto the cylinder.
8. Insert the transparent cylinder back into the base of the product and secure it by rotating clockwise.
9. Reattach the projector lampshade and secure it by rotating clockwise.

Switching Between Night Light Mode and Projection Mode

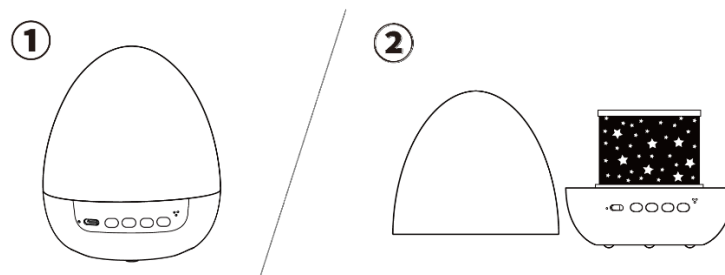

1. **Night Light Mode:** Turn on the device to project the pattern onto the lampshade, creating a soft night light effect.
2. **Projection Mode:** Turn on the device and remove the lampshade. The projector will display the projection onto the ceiling or wall.

BUTTONS INSTRUCTION

1. **ON/OFF Button:** Short press to turn the product on or off.
2. **Bluetooth Button:** Short press to turn Bluetooth on or off, accompanied by a prompt sound. After Bluetooth is activated, a voice prompt will announce "Bluetooth Mode." Use your mobile phone to search for the Bluetooth device named "**WH-E03**" and connect.
3. **Light Mode Switch Button:** Short press this button to switch between lighting modes in the following sequence (6 modes total):
 - Press once: Yellow light only
 - Press twice: White light only
 - Press three times: Blue light only
 - Press four times: Alternating two-color lighting
 - Press five times: Yellow, white, and blue lights all on
 - Press six times: Automatic cycling through all lighting modes
 - Press seven times: Turn off the light
4. **Rotation Button:** Short press to start or stop the rotation of the projection.

CHARGING INSTRUCTION

1. Please fully charge the product before first use.
2. Do not disassemble, crush, squeeze, or expose the product to fire. If severe swelling or overheating occurs, discontinue use immediately. Do not place the product in a high-temperature environment.
3. Connect the product to a suitable power source (5V/1A adapter, power bank, or laptop) for charging.
4. Charging time depends on the power supply used.

Charging Indicator:

- Red light: Charging
- Green light: Fully charged

IMPORTANT SAFETY PRECAUTIONS

1. Do not disassemble, crush, or damage the product.
2. Do not use the product in humid or high-temperature environments.
3. The light source of this product is not replaceable. When it reaches the end of its lifespan, the entire product must be replaced.
4. Disconnect the power when the product is not used for a long period. It is recommended to charge the product every 30 days to maintain battery performance and prevent reduced lifespan.
5. During normal use, do not place the product on a surface tilted more than 6°.
6. Use only certified power adapters.
7. Children under 14 years old should use this product under adult supervision.

INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.