

EN: DRYVATUS – USER MANUAL

PRODUCT INTRODUCTION


This electrical appliance does not require grounding.

Welcome, and thank you for choosing our product! The DRYVATUS Electric Shoe Dryer helps eliminate moisture and unpleasant foot odor, keeping your feet dry and comfortable all year round. Equipped with ultraviolet (UV) sterilization and deodorization, it enhances comfort and hygiene for your footwear and other items.

Designed with a sleek and practical shape, this product provides efficient performance and reliable quality to meet your needs. It is suitable for all types of shoes — including sneakers, leather shoes, and cotton-padded footwear.

In addition to drying shoes for daily comfort, this device can help relieve athlete's foot symptoms. During winter, it provides consistent warmth and dryness for shoes and boots. The DRYVATUS Shoe Dryer is a trusted household appliance used by thousands of families — truly, *the sunshine inside your shoes!*

Product Components:

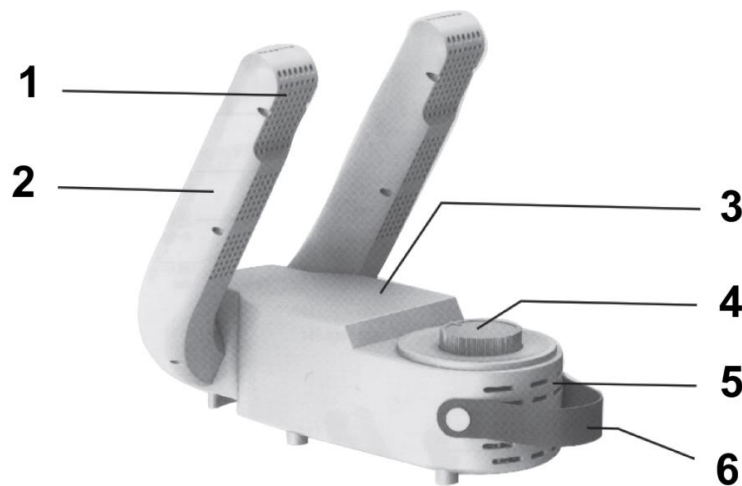

1. Warm air outlet
2. Bracket
3. Main body
4. Timer knob
5. Air inlet
6. Belt

OPERATING INSTRUCTIONS

1. **Placement:** Place the shoe dryer on a dry, flat, and stable surface before use.
2. **Adjust Brackets:** Press down the limit knob, rotate both brackets outward, then release the knob to lock the brackets in place. Insert your shoes onto the brackets.
3. **Power Connection:** Plug the power cord into a 220V–50Hz AC outlet.
4. **Set Drying Time:** Adjust the drying duration according to the shoe type and moisture level (see *Drying Time* section). Turn the timer knob clockwise to the desired time setting. The

shoe dryer will start operating immediately. Once the selected time elapses, the timer will return to the “OFF” position, and the unit will stop automatically.

5. **After Use:** Unplug the power cord, press the limit button, and gently fold the brackets back into place for storage.


Please Note:

- Some parts of the appliance may remain hot for a short time after use. Handle with care.
- To stop drying mid-cycle, turn the timer knob counterclockwise to the “OFF” position.
- If abnormal conditions occur (e.g., unusual noise, odor, overheating, or smoke), unplug the appliance immediately and disconnect from power.
- In case of a power outage during use, unplug the power cord for safety.

BASIC SAFETY INSTRUCTIONS

1. Check the power plug and cord before each use to prevent electric shock, fire, or malfunction.
2. Use only with a properly rated 220V–50Hz AC power supply.
3. Always turn the timer to the “OFF” position and unplug the appliance when not in use to prevent fire hazards.
4. Keep the unit away from direct sunlight and heat sources to prevent discoloration or deformation of plastic parts.
5. Do not use the appliance in bathrooms or other humid environments.
6. Avoid placing the dryer on vinyl, fabric, or soft surfaces that may block ventilation or pose a fire risk.
7. Do not wash or immerse the appliance in water to prevent electric shock.
8. Avoid dropping or subjecting the unit to strong impact or vibration.
9. Do not operate the appliance upside down.
10. Use only for drying shoes — do not use for other purposes.
11. Keep air inlets and outlets free from obstructions.
12. Keep flammable materials such as paper or cloth away from the appliance during operation.
13. Do not use near flammable solvents or gases.
14. Keep out of reach of children and do not allow them to play with the appliance.
15. Always use the air ducts in an upright position.
16. If the appliance malfunctions, contact the manufacturer’s authorized service center. Do not attempt repairs yourself.
17. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or a qualified technician to avoid hazards.

PRINCIPLE OF OPERATION – VISUAL REFERENCE

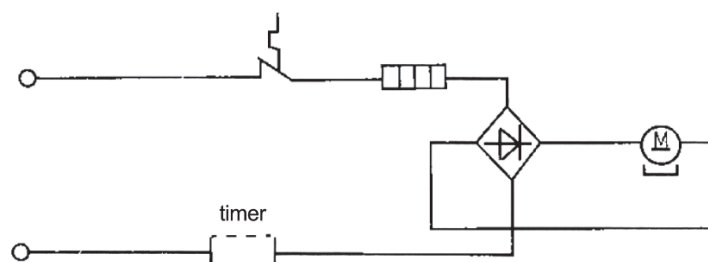

DRYING TIME

Select the appropriate drying time based on ambient temperature (approximately 20°C) and shoe material. In winter or when shoes are very wet, extend the drying time as needed. If shoes are not fully dry after the initial cycle, repeat for a shorter duration — but avoid excessively long operation.

Recommended Drying Duration:

Sneakers, boots, leather shoes — approximately 1 hour.

INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.