

EN: FEMISHAVE – USER MANUAL

PRODUCT INTRODUCTION

Thank you for choosing our dual-head electric hair trimmer. This product features a unique dual-end design: one end is equipped with a precision clipper head for smoothly trimming longer hair, while the other end features a floating dual-ring round head that closely follows the contours of the skin to efficiently remove short hair.

With its innovative dual-head, dual-motor design, IPX7 waterproof rating, and quiet, safe operation, this trimmer offers a comfortable and effective grooming experience.

PRODUCT SPECIFICATIONS

Operating Voltage: 3.7–4.2 V
Operating Current: 400 mA
Power: 2 W
Waterproof Rating: IPX7
Battery Capacity: 400 mAh
Charging Current: 400 mA
Charging Time: Approx. 2 hours
Dimensions: 167 × 33 × 32 mm
Weight: 138 g


INDICATOR LIGHT STATUS

1. **Clipper Head Operating:** Red and blue lights stay on
 2. **Round Head Operating:** Blue light stays on
 3. **Low Battery Warning:** Indicator light flashes
 4. **Charging:** Red light flashes (breathing effect)
 5. **Fully Charged:** Red light stays on
-

COMPONENT DESCRIPTION

1. Length-limiting comb
2. Clipper head
3. Type-C charging port
4. Power switch
5. Indicator light
6. Dual-ring floating round head
7. Protective cover
8. Cleaning brush
9. Charging cable


Note: This product contains a built-in lithium battery. Please use the device strictly according to the instructions in this manual.

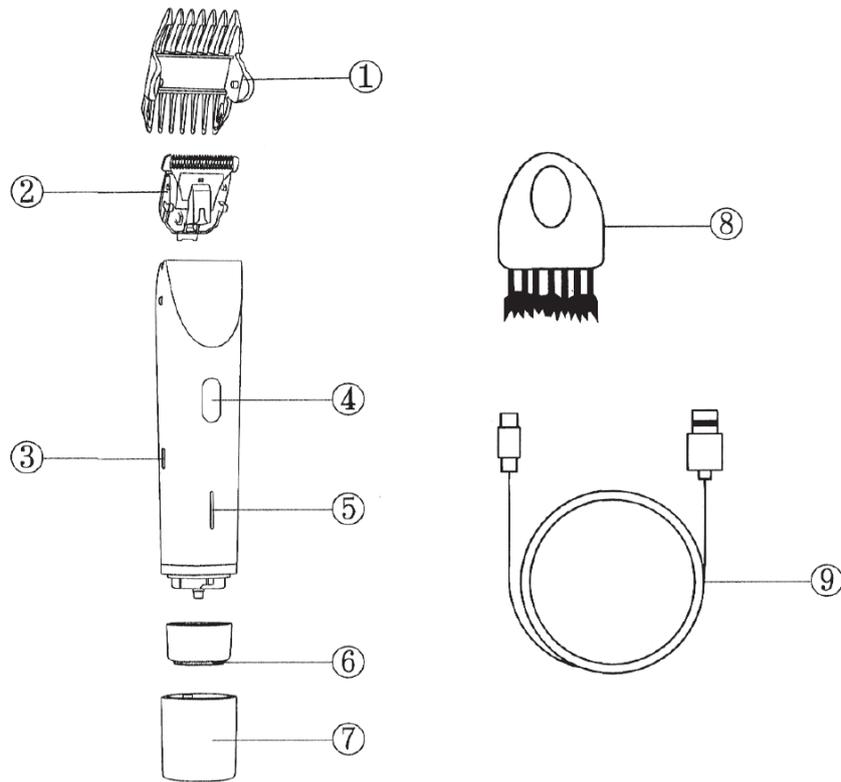


COMPONENT DISASSEMBLY INSTRUCTIONS

The following instructions and illustrations are intended as a guide for proper disassembly:

1. **Remove the length-limiting comb:** Gently slide the sides of the comb outward to loosen it, then remove.
2. **Remove the clipper head:** Push the blade backward until it loosens, then lift it off.

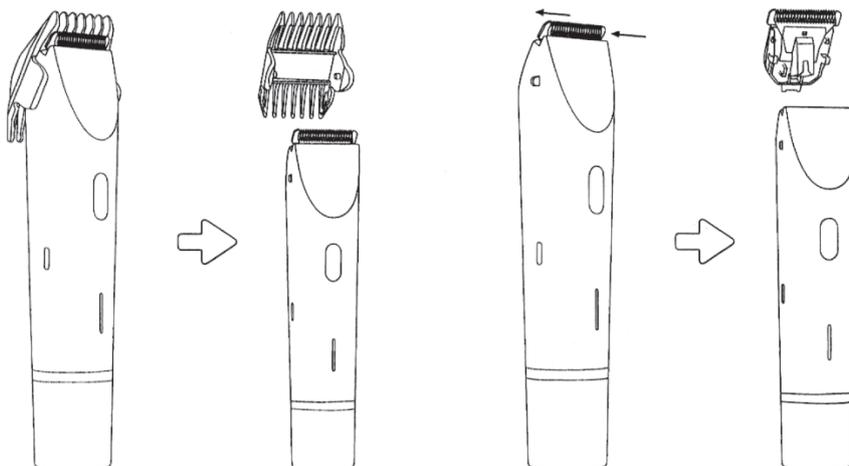

3. **Remove the round head:** Rotate the round head counterclockwise until it loosens, then remove it.
4. **Remove the rotary blade and screen:** Twist the four inner pillars on the white fixing base inside the round head. Once loosened, remove the fixing base, blade, and protective screen.

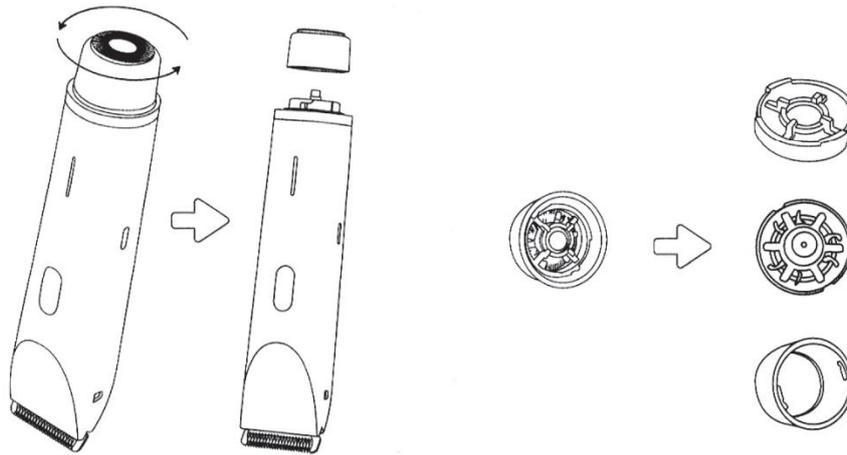


BASIC SAFETY INSTRUCTIONS

- This product is not intended for use by children.
- Do not use on damaged, irritated, or severely acne-prone skin.
- Avoid excessive pressure or prolonged use on the same area.
- Do not remove or replace blade heads while the device is operating.
- Do not expose the product to high-temperature environments.
- Keep the device away from corrosive liquids.
- Store the product out of reach of children.
- Do not leave the device unattended while it is in operation.
- Do not attempt to disassemble the main unit.
- If a blade head becomes damaged, stop using the product immediately.
- If the product is dropped or subjected to strong impact, inspect it for damage before reuse.

USER INSTRUCTIONS

Follow the steps below for proper operation:

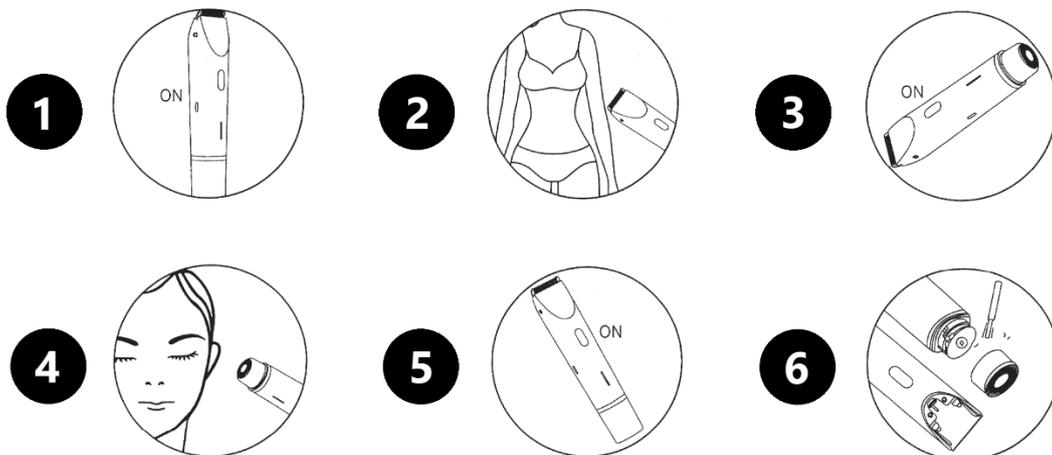

1. Press and hold the **On/Off** button for 2 seconds to activate the clipper mode for trimming longer hair.
2. Use the clipper head against the direction of hair growth to trim long hair evenly.

3. Press the **On/Off** button briefly once to switch to the round head shaving mode.
 4. Use the dual-ring round head against the direction of hair growth, moving in gentle circular motions to remove short hair.
 5. After use, press and hold the **On/Off** button for 2 seconds to turn off the device.
 6. Remove the blade head used and clean any remaining hair from the blade and storage area.
-

TROUBLESHOOTING

Symptom 1: Device does not operate (blue light turns on, then off)

Possible Cause: Overload protection has been activated, causing automatic shutdown.

Solutions:

1. Reinstall the round head blade and ensure the white fixing base is correctly oriented.
2. Remove the round head and check for hair or foreign objects obstructing the blade.
3. If the issue persists, contact after-sales service.

Symptom 2: Device does not operate (red and blue lights turn on, then off)

Possible Cause: Overload protection has been activated.

Solutions:

1. Remove the clipper head and check for hair or foreign objects jamming the blade.
 2. If the issue persists, contact after-sales service.
-

Symptom 3: Device does not respond at all

Possible Cause: Battery power is too low.

Solutions:

1. Fully charge the device before use.
 2. If the issue persists, contact after-sales service.
-

INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.