

# EN: FINETWIRLY – USER MANUAL

## Professional Hair Curling Wand

---

### PRODUCT SPECIFICATIONS

**Product name:** FINETWIRLY

**Product model:** DM-807

**Voltage:** AC 100–240V


**Frequency:** 50–60Hz

**Rated power:** 25W

**Power cord length:** 1.8 m

---

### PRODUCT OVERVIEW

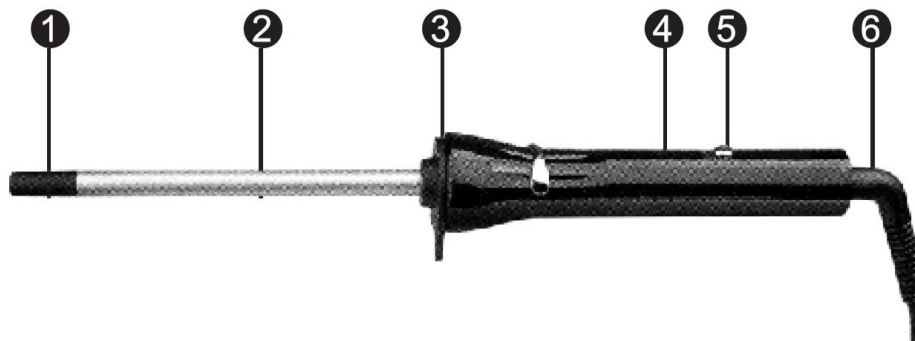

1. Cool Tip
  2. Coated Barrel
  3. Resting Stand
  4. LED Indicator
  5. Temperature Setting Button
  6. Rotatable Power Cord
- 

### IMPORTANT SAFETY PRECAUTIONS

**WARNING:** Do not use this appliance near bathtubs, showers, sinks, or other containers filled with water.

1. Before connecting the appliance to the power supply, ensure that the voltage indicated on the product matches your local mains voltage. Never leave the appliance unattended while plugged in, and always unplug it after use.
2. After using the appliance in a bathroom, unplug it immediately. Even when switched off, the appliance may still pose a danger if it comes into contact with water.
3. Avoid contact between the hot surfaces of the appliance and your skin. The barrel becomes extremely hot during use. To prevent burns, do not touch the heated areas for extended periods.

4. When the appliance is hot, place it only on a heat-resistant surface. Do not cover the appliance with towels, clothing, or other objects during use.
  5. This appliance is intended for use on dry hair only.
  6. Ensure that your hair and hands are dry before use. Do not touch the heating barrel or power plug with wet hands.
  7. When used on dyed hair, the barrel surface may become stained with hair color products.
  8. Do not use the appliance on hair treated with excessive amounts of styling products such as wax, gel, or mousse.
  9. Do not drop, strike, or misuse the appliance. If the appliance becomes damaged or malfunctions due to impact or dropping, discontinue use immediately.
- 

## **USER INSTRUCTIONS**

### **Turning The Appliance On/Off**

Plug the appliance into a standard power outlet. Press the temperature setting button to turn the appliance on. To turn it off, return the temperature setting to “0” and unplug the appliance after use.

### **Styling**

1. Allow the curling wand to heat up and select the appropriate temperature setting for your hair type.
  2. Ensure that hair is clean, dry, and free from tangles before styling.
  3. Wrap a section of hair around the barrel and hold for approximately 5 seconds.
  4. Repeat the process with all sections of hair until the desired style is achieved.
- 

## **MAINTENANCE AND STORAGE**

1. Ensure that the appliance is switched off, unplugged, and completely cooled before storing.
  2. Avoid pulling, bending, twisting, or wrapping the power cord tightly, as this may cause damage.
  3. Do not place stress on the power cord, especially where it enters the appliance, as this may cause fraying or breakage.
  4. Do not hang the appliance by the power cord.
  5. Do not store the appliance in a bathroom or other humid environments.
  6. Store the appliance in its original packaging or in a clean, dry place.
  7. Any repairs or servicing should only be performed by an authorized service technician.
- 

## **CLEANING**

**Keeping the appliance clean is important for safe and effective operation.**

1. Ensure that the appliance is switched off, unplugged, and completely cooled before cleaning.
2. Use a clean, soft, slightly damp cloth to wipe the appliance.
3. Do not use abrasive objects or materials that may scratch the appliance surface.
4. Do not use thinners, gasoline, alcohol, or other harsh chemicals to clean the appliance.

---

## INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.