

EN: GRUMKO – USER MANUAL

PRODUCT BRIEF INTRODUCTION



- (a) Shaver
- (b) USB charger
- (c) Comb
- (d) Precision trimmer
- (e) Nose hair trimmer cover
- (f) Nose & ear trimmer
- (g) Soft face sponge
- (h) Facial cleaning brush

NOTES

Before using this product, please read the operating instructions carefully and keep them for future reference.

1. Only use the included charger.
2. Charging voltage: 3.7 V, 1A.
3. If the charger is damaged, replace it with an original type to avoid hazards.
4. The three blades are made of ultra-thin alloy. To avoid breakage, do not press them by hand (Fig. 1).
5. The product's charger and storage temperature should not exceed 5°C – 35°C.
6. Do not rinse the charger under water (Fig. 2).
7. Unplug the charger before cleaning the shaver with running water (Fig. 3).
8. Waterproof rating: IPX6.
9. This product should not be used by individuals with physical, sensory, or mental limitations, or lack of experience, unless supervised or instructed by a responsible person.
10. Keep out of reach of children.
11. If the shaver does not operate after switching it on, please clean out any hair from inside.
12. When charging, the indicator light turns red.
13. Always place the protective cover on the shaver when traveling to protect the shaver head.




CHARGING

Ensure the shaver is turned off before charging. Fast charging takes about **5 hours**, providing approximately **45 minutes** of usage (Fig. 4).

Do not leave the product connected to the power supply for more than 24 hours.

1. Insert the charger into the shaver (Fig. 5).
2. Plug in the charger.
3. The charging indicator will light up (Fig. 6).
4. After fully charging, unplug the charger and remove the plug from the shaver.
5. Charging can also be done via the charging base.

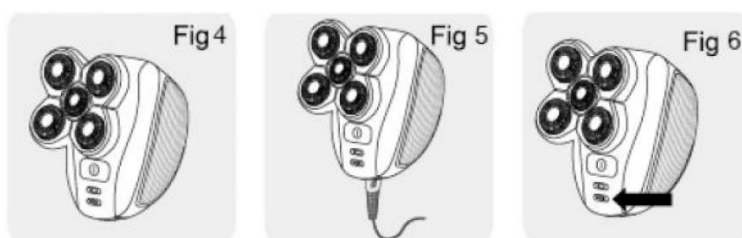

HOW TO USE THE PRODUCT

Shaving


1. Press the ON/OFF button to start the shaver.
2. Move the shaver head across your skin in straight lines and circles (Fig. 7).



Cleaning after use:

1. Turn off the shaver (Fig. 8).
2. Remove the side shaver heads one by one, then rotate and pull out the middle head as indicated by the arrow.
3. Rinse the shaver heads and hair storage compartment with running water (Fig. 9). Ensure thorough cleaning.
4. Clean the product's surface (Fig. 10).


5. Close the shaver heads and shake off excess water.
6. Do not wipe the shaver heads with a towel or tissue, as this may damage them.
7. Open the shaver heads again to allow them to air-dry (Fig. 11). A brush can also be used for cleaning.

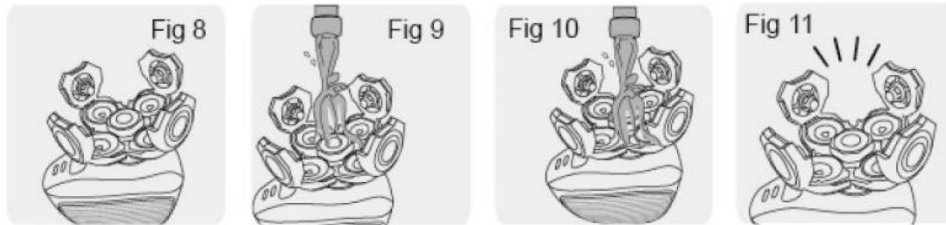

Changing the Shaver Head


Change the shaver head annually for optimal performance. Only replace it with a GRUMKO shaver head.

1. Remove the old shaver head assembly (Fig. 12).
2. Insert the new assembly into the top groove (1), then press down (2) until it clicks (Fig. 13).

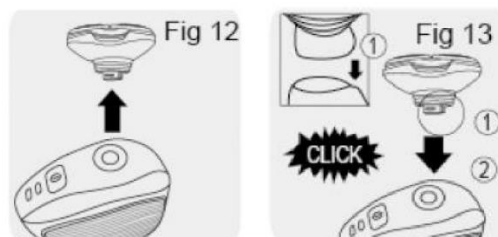

Precision Trimmer Instructions


1. Turn off the shaver.
2. Remove the shaver head and insert the hair clipper into the top slot.
3. Press down until it clicks into place (sound: *kaca*) (Fig. 14).

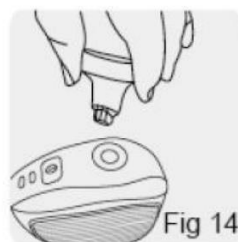

Trimming

- Ensure hair is clean and dry before trimming.
- Comb hair in the direction of growth before clipping.
- Attach the comb accessory to both side slots until it clicks (Fig. 15).
- Two comb lengths: **3MM** and **6MM**. Choose and install according to the length marking (Fig. 16).
- Remove comb accessory by releasing from one side to the other (Fig. 17).

- Turn on the switch and move slowly against the direction of hair growth for best results.

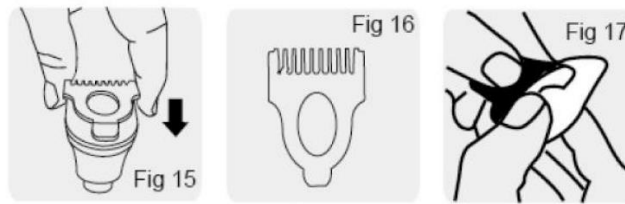

CLEANING AND LUBRICATION

1. Remove the precision trimmer head and clean it using the included brush or by rinsing with water.
 2. Do not use abrasive cleaners, alcohol, gasoline, or acetone.
 3. Clean the product after each use.
 4. For best results, lubricate the blades every **three months**.
(Lubricating oil is not included and must be purchased separately.)
-

NOSE & EAR TRIMMER INSTRUCTIONS

Installation:


- Turn off the shaver.
- Remove the shaver head.
- Insert the nose trimmer into the top slot, pressing down until it clicks (sound: *kaca*) (Fig. 18).

Trim Nose Hair:

1. Clean your nose.
2. Switch on the trimmer.
3. Carefully insert no more than **0.5cm** into the nostril and trim by turning it gently (Fig. 19).
4. To reduce irritation, press one side of the trimmer tip against your skin.

Trim Ear Hair:

1. Clean the outer ear, ensuring no earwax.
2. Switch on the trimmer.
3. Gently trim long hair around your ear, inserting no more than **0.5cm** inside the ear canal (Fig. 20).

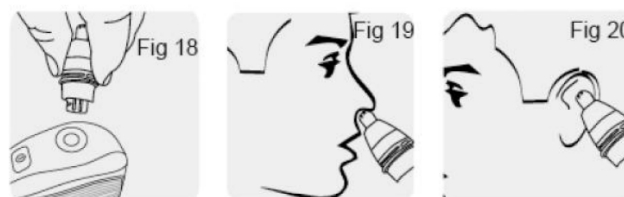

SOFT FACE SPONGE & CLEANSING BRUSH

The **soft face sponge** is designed for gentle face washing.


The **cleansing brush** helps remove oil and dirt, promoting clean, healthy skin.

Instructions:

1. Switch off the appliance.
2. Attach the cleansing brush (Fig. 22).
3. Moisten the brush head with water. Do not use it dry to avoid skin irritation.
4. Moisten your face and apply a cleanser.
5. Place the brush on your right cheek (Fig. 24).
6. Switch on the appliance.
7. Move the brush gently from the nose towards the ear.
8. After **20 seconds**, move to the left cheek, avoiding the eye area.
9. After another **20 seconds**, move to the forehead, brushing left to right.
Note: Avoid over-cleansing. Do not treat any area for more than 20 seconds.
10. Rinse and dry your face.
11. Clean the attachment after use (refer to Cleaning and Maintenance).

Note: Both the soft face sponge and the facial cleansing brush use the same base (Fig. 23-1-2).

Tip: Use this attachment before shaving for easier, cleaner results.

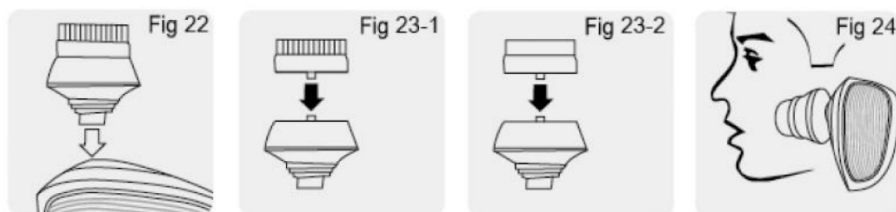

TRIMMING

Use the built-in trimmer for shaping sideburns and mustaches.

1. Push the slide upwards to reveal the trimmer (Fig. 21).
2. Turn on the shaver to activate the trimmer.



ENVIRONMENTAL PROTECTION

1. Unplug the charger and remove the product's plug from the shaver.

2. Remove the battery before disposal.

Do not reconnect the shaver after the battery has been removed.

INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.