

EN: JOMELODI – USER MANUAL

PRODUCT SPECIFICATIONS

Function: Children's Phonograph

Model Number: D7

Battery: IMR 14500 Rechargeable Li-ion

Battery Specifications: 3.7V, 500mAh, 1.85Wh


Package Includes: 1x Main Unit, 1x Power Cord, 96x Music Discs, 1x Instruction Manual

CAUTION: Improper disposal of this product may harm the environment. Please recycle responsibly. Keep the box and instruction manual as they contain important information.

WARNINGS

1. Not suitable for children under 3 years old. Contains small parts that may pose a choking hazard.
 2. Regularly check the charger cord, plug, casing, and other components for damage. If damage is found, stop using the product until it has been repaired.
 3. This product contains a built-in 3.7V / 300mAh lithium battery that cannot be disassembled or replaced. If the battery is damaged, contact the service provider for repairs.
 4. The charger is not a toy. Only use the recommended charger to charge the device. Charging should be carried out by an adult or under adult supervision. (Recommended specifications: 5V – 500mA).
 5. Do not use this product in direct sunlight.
 6. This product contains electronic components and must not be used in water or in humid environments. Clean with a dry cloth only.
 7. If the product will not be used for an extended period, fully charge and discharge it at least once a month to maintain battery health.
-

PRODUCT OVERVIEW

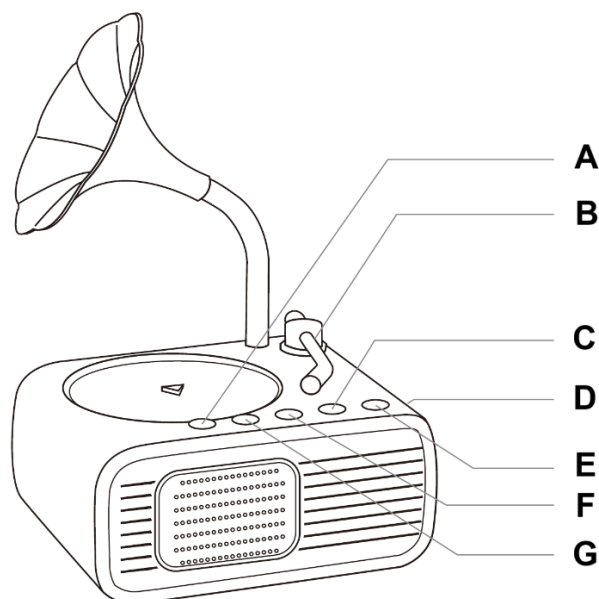

- A. Recording Button
 - B. Power On/Off (Toggle Switch)
 - C. Pause/Play Button
 - D. Type-C Charging Port
 - E. Next Song Button
 - F. Previous Song Button
 - G. Volume Control
-

FUNCTION DESCRIPTION

1. Insert the decorative trumpet horn into the main unit's jack and rotate it to the desired angle. The trumpet horn is optional and can be attached or removed as desired.
 2. Select your favourite music disc, place it on the turntable, and snap it securely into place.
 3. Move the toggle switch toward the turntable until you hear a "click." This activates the suction switch, and the motor will rotate the disc one to two times before playback begins. To stop playback, move the toggle switch back to its original position, which disconnects the power.
 4. **Pause/Play:** While the disc is playing, press the pause button to stop playback, then press again to resume.
 5. **Volume Control:** Use the volume up and down buttons to adjust the sound level.
 6. **Recording Function:** With the power switched on, press the recording button to hear the prompt "Recording start," then begin speaking. The maximum recording time is 30 seconds. Each new recording will overwrite the previous one. When recording is complete, press the play button to hear "Play recording" and listen to your recording. After 10 seconds, playback will automatically switch back to disc mode. If there is no operation for 3 minutes, the device will prompt "Children, come play with us" before stopping the disc.
 7. **Automatic Power-Off:** If the product is not used for more than 5 minutes, it will say "Children, bye bye" and power off.
 8. **Low Battery Warning:** When the battery is low during use, the device will prompt "Insufficient power, please charge." Charging will disable all functions for safety. While charging, the red indicator light will turn on; it will turn off when charging is complete. Full charging takes approximately 1–1.5 hours.
-

INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.