

EN: JOYPHONE – USER MANUAL

PRODUCT SPECIFICATIONS

Description: Touchscreen Smart Toy Phone

Model Number: Z10

Screen Size: 2.8" IPS Display, 240 × 320 pixels

Video Resolution: VGA, 720P / 1080P

Video/Audio Formats: AVI / MP3

Photo Resolution: VGA / 2 MP / 3 MP / 5 MP / 8 MP / 12 MP / 16 MP

Battery Capacity: 600 mAh rechargeable Li-ion battery

Charging Time: 3–4 hours

Battery Life: 2–3 hours

Input: 5 V $\equiv$ (Type-C)

Output Power: 2 W


Product Material: ABS

Games: 2048, Basketball, Flyball, Gold Coins

Languages: English, Chinese, German, French, and others

Photo Quality: 1 MP–48 MP

PRODUCT OVERVIEW

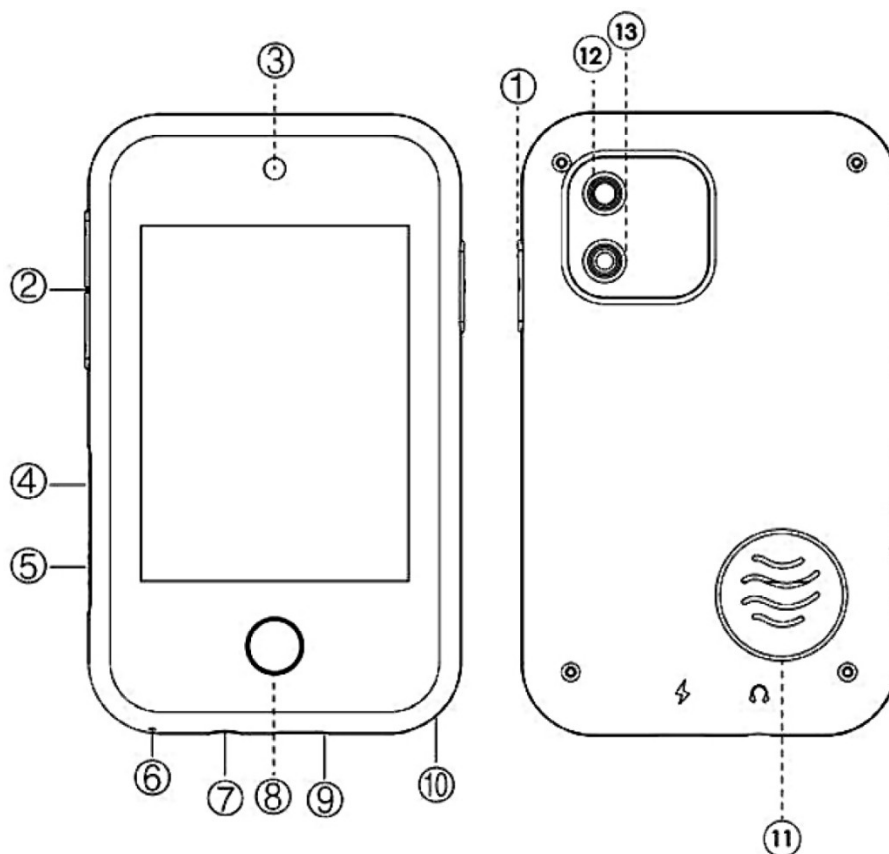

1. Power On/Off Button
2. Volume Up/Down Buttons
3. Front Camera
4. TF Card Slot
5. Reset Switch

6. **Microphone**
 7. **3.5 mm Headphone Jack**
 8. **Home Button**
 9. **Type-C Charging Port**
 10. **Lanyard Hole**
 11. **Speaker**
 12. **Rear Camera**
 13. **Flashlight**
-

OPERATION GUIDE

1. **Power On/Off:** Press and hold for 2 seconds to turn the device on or off. Press once briefly to lock or unlock the screen.
 2. **Volume Up/Down:** Press the volume buttons to increase or decrease the volume.
 3. **Reset Switch:** Slide the switch up to power on the device. Slide it down to reset the device.
 4. **TF Card Slot:** Supports TF cards with capacities from 4 GB to 32 GB.
 5. **Type-C Charging Port:** It is recommended to use a 5 V / 1 A USB power adapter.
 6. **Headphone Jack:** Supports 3.5 mm headphones only.
-

APPLICATIONS OVERVIEW



1. Camera


Tap to enter Camera mode.



- Tap **Button 1** to apply or remove a frame or filter.
- Tap **Button 2** to take a photo.
- Tap **Button 3** to open the album. Swipe left or right to browse photos and videos. Tap **Options** to delete a single file or delete all files. Press the **Home** button to return to Camera mode.
- Tap **Button 4** to switch between the front and rear cameras.

2. Video

Tap to enter Video mode.

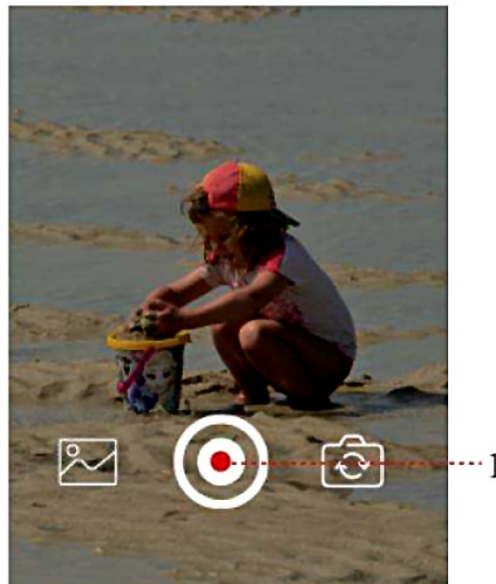

- Tap **Button 1** to start recording. Tap it again to stop recording and save the video automatically.
- Tap to play or pause the recorded video.
- Open the album and swipe left or right to browse photos and videos.

- Tap **Options** to delete a single file or delete all files.
- Press the **Home** button to return to Video mode.

3. Music

Tap to enter **Music** mode. Before using this function, copy your MP3 files to the **MP3** folder on the TF card and insert the TF card into the device. Tap the **Previous** or **Next** button to change tracks. Tap the **Play/Pause** button to control playback. Press the **Home** button to return to the main screen. Music playback is only available while the Music application is open.

4. Settings

Tap to open the **Settings** menu. Swipe left or right to browse the available settings, such as **Brightness** and **Advanced**. Tap **Advanced** to change the language and other system settings. Press the **Home** button to return to the main screen.

5. Alarm Clock

Tap to open the **Alarm Clock** application. You can set up to four different alarms. Tap the displayed time to set the desired alarm time, then tap the repeat option to choose the reminder schedule. Use the on-screen switch to enable or disable the alarm.

6. Photos

Tap to open the **Photo Album**. Swipe left or right to browse photos and videos. Tap **Delete** to remove the current file or **Delete All** to remove all files. Videos can be played or paused directly from the album. Press the **Home** button to return to the main screen.

7. Voice Recorder

Tap to open the **Voice Recorder**. Tap the red **Record** button to begin recording, then tap it again to stop. The recording is saved automatically. Swipe left or right to browse saved recordings. Tap the **Play/Pause** button to listen to the selected recording. Tap the **Delete** button to remove the current recording. Open the settings menu to view the recording list or select between **High Quality** and **Low Quality** recording modes.

8. Calculator

Tap to open the **Calculator**. Perform calculations using the on-screen numeric keypad. Press the **Home** button to return to the main screen.

9. Calendar

Tap to open the **Calendar**. Swipe left or right to browse different dates. Press the **Home** button to return to the main screen.

10. Timer

Tap to open the **Timer**. Tap **Start** to begin timing and tap it again to stop the timer. Tap **Reset** to clear the timer and start over. Press the **Home** button to return to the main screen.

11. Flashlight

Tap to open the **Flashlight** application. Tap **ON** or **OFF** to switch the flashlight on or off. Press the **Home** button to return to the main screen.

12. Games

Tap to open the **Games** menu. Select one of the four available games to begin playing. Press the **Home** button to return to the main screen.

13. Video Player

Tap to open the **Video Player**. Select the video you want to play and use the on-screen controls during playback. Press the **Home** button to return to the main screen.

14. Themes

Tap to open the **Themes** menu. Select the theme you want to apply to the device. Press the **Home** button to return to the main screen.

15. Habits

Tap to open the **Habits** application. Choose one of the four available reminder plans and set the desired reminder time. Press the **Home** button to return to the main screen.

16. Stories

Tap to open the **Stories** application. Select a story to begin playback. Press the **Home** button to return to the main screen.

17. Wonders

Tap to open the **Wonders** application. Swipe left or right to browse famous landmarks from around the world. Tap the **Play** button to hear the pronunciation of each landmark's name. Press the **Home** button to return to the main screen.

18. Tools

Tap to open the **Tools** menu. Select the **Stopwatch** to begin timing activities. Press the **Home** button to return to the main screen.

19. Learn Card

Tap to open the **Learn Card** application. Use this feature to learn letter recognition and word pronunciation. Press the **Home** button to return to the main screen.

INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.