

EN: RETCAM – USER MANUAL

PRODUCT SPECIFICATIONS

| FEATURE | DETAILS |
|------------------|-----------------------|
| Screen Size | 1.44 Inch |
| Video Format | AVI |
| Video Resolution | 1920×1080P |
| Photo Resolution | 3760×2128 |
| Video Frame Rate | 30 fps |
| Picture Format | JPG |
| Image Ratio | 4:3 |
| Battery Capacity | 180 mA / 350 mA |
| Operating Time | About 600 minutes |
| Charging Voltage | DC 5V |
| Memory Card | TF Card (MicroSD) |
| Battery Type | High-capacity Polymer |

Note: This product is designed for **indoor use only**. Do not cover or block the heat dissipation vent.

PRODUCT OVERVIEW:



1. Power button
2. Screen
3. Camera lens
4. Power button / Shutter button
5. Flash light
6. "+" Key
7. "-" Key

POWER-ON AND SHUTDOWN:

Long press the power button to turn the device on. Long press the power button again to turn it off.

TAKING A PICTURE

When powered on, the device starts in photo mode (as shown in the figure). Press the power button to take a photo. Press the "2" key to switch the filter. Photos are automatically saved. Press the "+" key twice to view the saved photos. Use the "+" key or "2" key to scroll up and down. Long press the "+" key to exit view mode.



1. Press the power button to take photos.
2. The screen will display this icon, indicating photo mode.
3. Press this button to switch the filter.

VIDEO RECORDING

Press the "+" key to enter video mode (as shown in the figure). Press the power button to start recording. Press the power button again to stop recording. The video will save automatically. Press the "+" key twice to view saved videos. Use the "+" key or "2" key to scroll through the videos. In video view mode, press the power button to play the selected video. Long press the "+" key to exit view mode.



1. The screen will display the video recording status.
2. A red light will flash.

FILTERS

In photo mode, press the "-" key to switch between filters.



PLAYBACK

Press the "+" key twice to view the saved videos (as shown in the figure). Press the power button to play a video. During playback, press the power button to pause. Use the "+" key or "2" key to scroll up and down. Long press the "+" key to exit view mode.



1. Press the power button to play and pause videos and view photos.
2. In playback mode, the video icon indicates a video file; files without it are photos.

FLASH LAMP

Slide the flash switch up to turn on the flash, and slide it down to turn it off. During video recording, the flash will automatically turn on (as shown in the picture). The flash will activate for two consecutive photos. If not needed, slide the flash switch down to turn it off.



* When recording video, lifting the flash switch will keep the flash illuminated during recording.

RESET

If the system becomes unresponsive and no operation is possible, press both the "+" and "-" keys simultaneously to perform a forced reset.

Note: The reset operation will not cause data loss, damage files, or alter system settings.

CHARGING



During charging, the charging icon will blink. The icon will disappear once fully charged (as shown in the figure).

INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.