

## EN: RINGRANG – USER MANUAL

### PRODUCT SPECIFICATIONS

**Product name:** RINGRANG

**Product model:** KP06

**Battery type:** Integrated Li-ion battery

**Battery specifications:** 3.7V, 800mAh, 2.96Wh

**Display:** IPS touch screen

**Video format:** AVI

**Audio format:** MP3

**Charging time:** 2–3 hours

**Standby time:** 25–30 days

**Rated input:** DC 5V 1A (Type-C interface)

**Materials:** ABS, silicone


### Package contents:

- Mobile phone ×1
- Lanyard ×1
- User manual ×1
- Blister packaging ×1
- Type-C charging cable ×1

**Recommended age:** 3+ years

---

### PRODUCT COMPONENTS

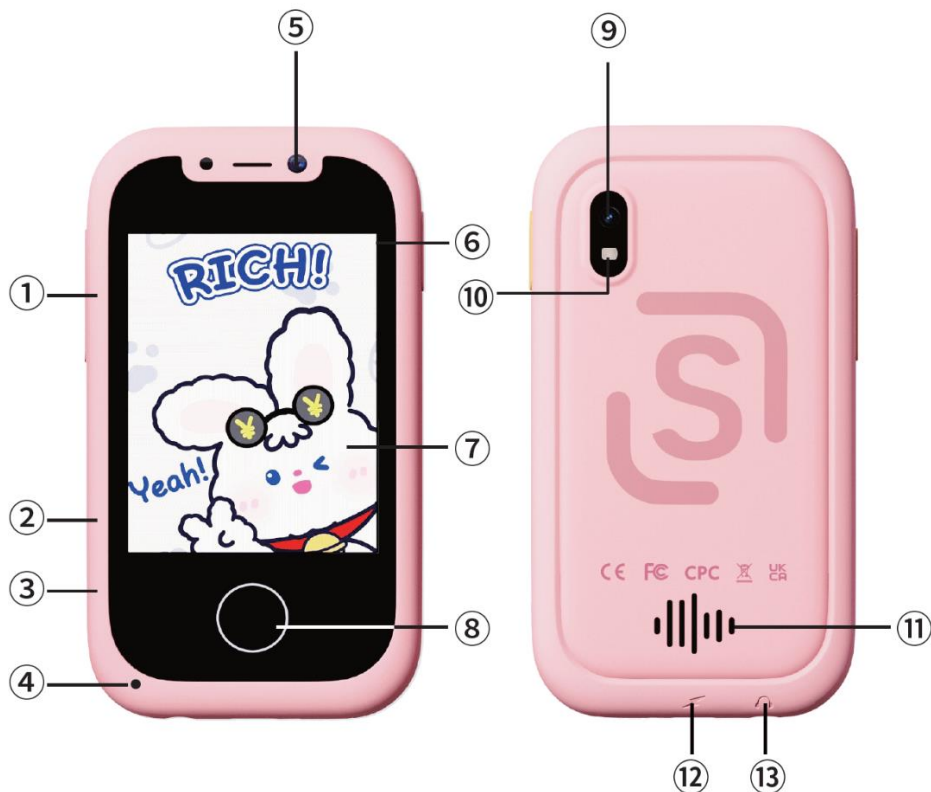

1. Volume up/down button
  2. RESET and power switch
  3. TF card slot
  4. Microphone
  5. Front camera
  6. Power button
  7. IPS touch screen
  8. HOME button
  9. Rear camera
  10. Flashlight
  11. Speaker
  12. Type-C charging port
  13. 3.5 mm headphone jack
- 

## OPERATION GUIDE

### Powering On

Press and hold the **Power button** to turn on the phone and access the home screen. Swipe left or right to change the wallpaper. Press the **HOME button** to return to the main page. Swipe up or down to return to the desktop screen. Tap any application icon to open the corresponding function.

---


### Important Notes

- Fully charge the device before first use.
- Connect the Type-C cable to the phone and connect the other end to a 5V/1A power adapter.
- During charging, the battery icon in the top-right corner of the screen will animate. Once fully charged, the icon will stop moving and display a full battery symbol.

### RESET Switch

The RESET switch is used if the phone becomes unresponsive.

- Slide the switch upward to turn the device ON. Slide the switch downward to turn the device OFF or reset the device.
- For normal daily use, keep the switch in the ON position.

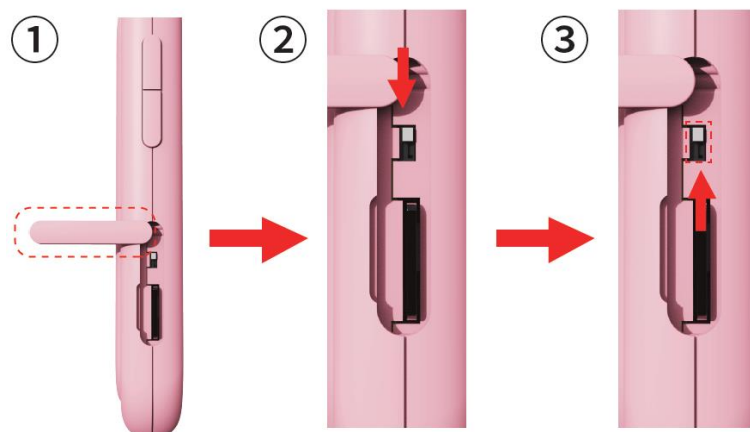

---


## USER INSTRUCTIONS
 
### Applications Overview



1. User instructions
  2. Quick flashlight shortcut
  3. Quick camera shortcut
  4. Photo mode
  5. Video recording mode
  6. Gallery
  7. Audio recorder
  8. Music player
  9. Video player
  10. Timer
  11. Flashlight
  12. Alarm clock
  13. Calendar
  14. Calculator
  15. Tools
  16. Themes and wallpapers
  17. Pedometer
  18. Weekly activity data
  19. Games
  20. Settings
  21. Story mode
  22. Paint mode
  23. Global functions
  24. Schedule
-

## GENERAL CONTROLS OVERVIEW

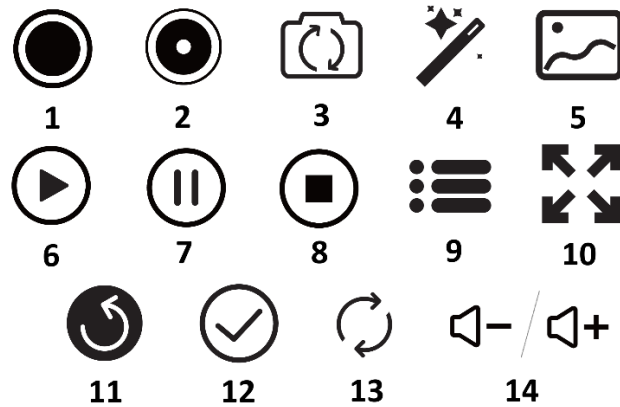

1. Photo capture / record button
2. Stop recording
3. Switch between front and rear cameras
4. Filter options
5. Multimedia preview
6. Play
7. Pause
8. Stop
9. Menu
10. Full-screen mode
11. Clear current timer
12. Confirm wallpaper selection
13. Select playback mode
14. Adjust volume

---

## INSTRUCTIONS

Before using the phone, select the **Instructions** icon on the main screen and read the information carefully. It is recommended to review these instructions before using the device functions.

### Desktop Shortcuts

- Tap the **Quick Flashlight** icon to open the flashlight function.
- Tap the **Quick Camera** icon to quickly access the camera.

---

### Photo Mode

1. Select the **Photo Mode** icon on the main screen to open the camera.
  2. Tap the **Capture** button to take a photo.
  3. Tap the **Camera Switch** icon to change between the front and rear cameras.
  4. Tap the **Filter/Sticker** icon to enable or disable fun photo effects and stickers.
  5. Tap the preview image to view saved photos.
  6. Press the **HOME** or **Power** button to exit photo mode.
-

## Video Recording

1. Select the **Video Mode** icon on the main screen.
  2. Tap the **Record** button to start recording.
  3. Tap the **Stop** button to end recording.
  4. Use the **Camera Switch** icon to change between front and rear cameras.
  5. Tap the video preview to watch recordings.
  6. Press the **HOME** or **Power** button to exit video mode.
- 

## Gallery

1. Open the **Gallery** from the main screen.
  2. Tap any photo to preview it.
  3. Swipe left or right to browse images.
  4. Select **Options** to delete individual photos or all files.
  5. Press the **HOME** button to return to the previous menu.
- 

## Audio Recorder

1. Open the **Audio Recorder** from the main menu.
  2. Tap the **Record** button to start recording audio.
  3. Tap **Stop** to finish recording.
  4. Tap **Play** to listen to recordings.
  5. Use the menu options to:
    - View recordings
    - Play or delete recordings
    - Delete all recordings
    - Adjust recording quality
  6. Press the **HOME** or **Power** button to exit the recorder.
- 

## Music Player

1. Open the **Music Player** to access saved MP3 files.
2. Select a song from the playlist to begin playback.
3. Use the **Play**, **Pause**, and arrow buttons to control music playback.
4. Open the menu to:
  - Refresh playlists
  - Enable repeat or shuffle playback
  - Adjust background playback settings
5. Adjust the volume using the on-screen controls or the side volume buttons.

**Note:** Only MP3 audio files are supported. Music files should be stored in the **My Music** folder.

---

## Video Player

1. Open the **Video Player** from the main menu.
  2. Select a video to start playback.
  3. Use the playback controls to play, pause, or stop videos.
  4. Tap the full-screen icon for full-screen viewing.
  5. Videos can be deleted individually or all at once through the **Options** menu.
- 

## Timer

1. Open the **Timer** function.
  2. Set the desired countdown time.
  3. Use the **Play**, **Pause**, and **Clear** buttons to control the timer.
  4. Press the **HOME** button to exit.
- 

## Flashlight

1. Open the **Flashlight** function.
  2. Tap **ON/OFF** to enable or disable the flashlight.
  3. Swipe the screen or press the **HOME** button to exit.
- 

## Alarm Clock

1. Open the **Alarm Clock** menu.
  2. Select an alarm to configure:
    - Alarm on/off
    - Alarm time
  3. Press **Save** after making changes.
  4. When the alarm sounds, select **Stop** or **Snooze**.
- 

## Calendar

- Open the **Calendar** to view dates and months.
  - Swipe left or right to switch between months.
  - Press the **HOME** button to exit.
- 

## Calculator

1. Open the **Calculator** function.
  2. Enter numbers and calculations using the touchscreen.
  3. Press **Enter** to calculate results.
  4. Press **Clear** to remove entered values.
-

## Tools

The **Tools** menu includes additional utilities such as a stopwatch.

- Press **Play** to start the stopwatch.
  - Press **Pause** to pause timing.
  - Press **Stop** to reset the stopwatch.
- 

## Themes And Wallpapers

1. Open **Themes and Wallpapers** from the home screen.
  2. Swipe left or right to browse available themes and wallpapers.
  3. Tap **Confirm** to apply the selected wallpaper or theme.
- 

## Pedometer

The pedometer tracks:

- Steps
- Distance travelled
- Calories burned

Select **Weekly Data** to view activity statistics for the past week.

---

## Games

1. Open the **Games** menu.
  2. Swipe left or right to browse available games.
  3. Tap a game icon to start playing.
  4. Press the **HOME** button to return to the game menu or exit.
- 

## Settings

The Settings menu allows you to configure:

- Language
- Time and date
- Ring volume
- Screen brightness
- Screen timeout
- School Mode scheduling

Press **OK** to confirm settings.

---

## Story Mode

1. Open **Story Mode** from the main menu.

2. Use the playback controls to:

- Play or pause stories
  - Skip to the next or previous story
  - Select playback mode:
  - Single repeat
  - Playlist repeat
  - Random playback
- 

### Paint Mode

Paint Mode allows children to draw and create pictures using:



1. Pencil tool
  2. Stickers
  3. Undo function
  4. Eraser
  5. Colour palette
  6. Save drawing
  7. Drawings can be saved or deleted through the options menu.
- 

### GLOBAL FUNCTION

The Global Function includes educational world information featuring:

- Seven continents
  - Four oceans
  - Audio reading function
- 

### SCHEDULE

The Schedule function includes twelve daily reminder options for organising activities and routines.

---

### TROUBLESHOOTING

#### Device Freezes

Open the silicone side cover and move the RESET switch down and then back up to restart the device.

### **Distorted or Noisy Sound**

- Check whether the speaker is dirty or blocked.
- Try playing a different audio file to determine whether the original file is damaged.

### **No Sound Through Headphones**

- Check that the volume is not set to zero.
- Ensure the headphones are connected properly.

### **Computer Connection Issues**

1. Check that the Type-C cable is securely connected to both the phone and computer.
  2. Restart the device by turning it off for 30 seconds and then turning it back on.
  3. Disconnect and reconnect the cable.
- 

### **PRODUCT AND USER SAFETY NOTES**

1. Keep the device dry and do not use it in damp environments.
  2. Do not expose the product to high temperatures, direct sunlight, or heat sources.
  3. The built-in battery is non-removable. If damaged, contact customer support or the retailer for assistance.
  4. Only use a 5V/1A charger. Using a charger with higher voltage may damage the device.
  5. Charging should only be performed under adult supervision.
  6. If the memory card becomes full, delete unnecessary photos or videos to free storage space.
  7. Avoid using the RESET switch during normal operation.
  8. This product contains small parts and should be used under adult supervision.
  9. Do not mix different battery types or old and new batteries.
  10. Suitable for children aged 3 to 14 years.
  11. Keep the product clean before and after use.
  12. Parents should regularly inspect the device for damage, sharp edges, or exposed parts.
  13. Do not move the product while charging.
  14. Children under 3 years old must not touch the device during charging.
- 

### **INSTRUCTIONS FOR RECYCLING AND DISPOSAL:**



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.