

# EN: SECUSTOP – USER MANUAL

## Product Overview



1. **Wedge-Shaped Alarm Pedal:** If an intruder attempts to open the door, the unit wedges securely underneath it, helping to prevent entry while triggering the alarm.
2. **Sensitivity Switch:** Allows you to adjust how much movement or vibration is required to activate the alarm.
3. **Power ON/OFF Button:** Turns the device on or off.
4. **Non-Skid Pad:** Prevents the door from sliding and ensures immediate alarm activation when pressure is applied.
5. **Battery Compartment:** Device is powered by one 6F22 9V battery (not included). Before use, please insert the battery in the correct polarity (as illustrated on the compartment interior).

## Controls and Usage



1. **ON:** Activates the doorstop alarm.
2. **OFF:** Deactivates the doorstop alarm.
3. **H – High Sensitivity:** Alarm is triggered by slight vibration or minimal door movement.
4. **M – Medium Sensitivity:** Alarm is triggered by moderate vibration or movement.
5. **L – Low Sensitivity:** Alarm is triggered only by stronger force or significant movement.

---

## Placement

Place the alarm flat on the floor directly behind the door. When the door is opened, it will press against the wedge-shaped pedal, activating the alarm according to the selected sensitivity level (maximum sound level: 120 dB).

---

## INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.