


EN: TICTRONIC – USER MANUAL

BUTTON FUNCTIONS

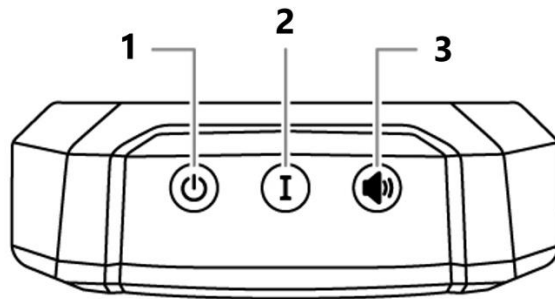

1. **Power Button**
2. **Mode Button**
3. **Volume Button**

(The device enters sleep mode after 2 minutes of inactivity.)

Power Button

Press and hold the power button to turn on the device. It will start directly in **Single Player Mode**.

Mode Button

Press the mode button to switch between the following game modes in sequence:
Single Player Mode → Two-Player Mode → Memory Mode → Whack-a-Mole Mode

Volume Button

There are **three volume levels** that cycle in the following order:
Medium → Low → Medium → High → Medium (The default setting is Medium.)

MODE DESCRIPTIONS

Single Player Mode

- The player moves first, followed by the AI.
- The screen displays up to **six moves** at a time. If additional moves are made, the oldest moves are automatically cleared.
- **Clearing rules:**
 - When the seventh move is made, the first move disappears.
 - When the eighth move is made, the second move disappears, and so on.

Two-Player Mode

- Player 1 moves first, followed by Player 2.
- The screen displays up to **six moves** at a time. If additional moves are made, the oldest moves are automatically cleared.

- **Clearing rules:**

- When the seventh move is made, the first move disappears.
- When the eighth move is made, the second move disappears, and so on.

Memory Mode

- Players must eliminate glowing rings in the correct sequence.
- The game consists of **9 main levels**, each containing **3 sub-levels**.
- The number and speed of glowing rings increase as the difficulty progresses.
- Each challenge starts from **Level 1**.
- Completing **3 sub-levels** earns a **red glowing ring**.
- Collect **9 red rings** to win the game.
- After completing all levels, pressing the button again restarts the challenge.
- **Failure:** If a challenge is failed, all red rings are cleared, and the game restarts from the beginning.

Whack-a-Mole Mode

- Players must eliminate the appearing colors before they accumulate.
- The speed increases gradually.
- If more than **six grid spaces remain uncleared**, the game ends.

INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.