

EN: VAPERO – USER MANUAL

Model number: DF-A001

Please read this user manual carefully before operating the appliance.

It contains important safety, usage, and maintenance information. If you have any further questions, please contact our customer service.

IMPORTANT SAFETY INSTRUCTIONS

1. **Warning!** The nozzle becomes extremely hot during operation.
2. **Risk of scalding!** Avoid contact with the steam emitted during use.
3. Keep this appliance away from children. It is not a toy and should not be used or played with by children.
4. Do not leave the appliance unattended while it is switched on. Always unplug it from the power outlet before cleaning, performing maintenance, or filling/emptying the water tank.
5. **WARNING:** This appliance may be used by individuals with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, if they have been properly supervised or instructed on safe usage and understand the potential hazards. Children should not use or play with the appliance.
6. After unpacking, check the appliance for any visible damage. Keep packing materials (e.g., plastic bags, foam) out of the reach of children, as they pose a suffocation hazard. Dispose of these materials according to local regulations.
7. The manufacturer is not responsible for any damage caused by improper, incorrect, or irresponsible use or repairs carried out by unqualified personnel.
8. Keep the power cord away from hot surfaces.
9. Do not operate the appliance with wet hands or feet.
10. If the power cord is damaged, it must be replaced by the manufacturer or an authorized service center to avoid hazards.
11. Before connecting the appliance, ensure the voltage corresponds to the value listed on the product label. Incorrect voltage may damage the appliance.
12. Do not immerse the appliance in water or any other liquid.
13. The appliance may be damaged if it has been dropped or subjected to heavy impacts. Do not use the appliance if it has fallen or if there are signs of leakage.
14. Keep the appliance out of the reach of children.
15. The use of extension cords not recommended by the manufacturer may result in damage or accidents.
16. If the power cord is damaged, it must be replaced by the manufacturer, a technical assistance center, or a similarly qualified person to prevent risks.
17. Never allow electrical parts to come into contact with water—this poses a risk of short circuits.
18. This appliance is not suitable for cleaning up liquids.
19. Do not touch the appliance with wet hands or feet.
20. Do not use the appliance while barefoot.
21. Unplug the appliance from the power outlet before cleaning or performing maintenance.
22. Never immerse the appliance in water or other liquids.
23. Ensure the power cord does not come into contact with hot or sharp surfaces.
24. If the appliance malfunctions, immediately unplug it from the power outlet. Do not use a faulty appliance.

25. Repairs should only be carried out by an authorized service center.
26. Do not leave the appliance unattended when plugged in. Always disconnect the plug when the appliance is not in use.
27. Do not place heavy objects on the power cord or expose it to heat sources. This could damage the cord.
28. This appliance is intended for domestic use only. Always unplug the appliance if it is upside down or not in use.
29. Before cleaning or performing maintenance, always disconnect the appliance from the power outlet.
30. In case of unusual situations, such as smoke or unusual noises, immediately turn off the appliance and contact your dealer or service center.
31. Do not use this appliance with programmable timers, remote control systems, or automatic switch devices.
32. Avoid using the appliance with damaged power sockets or cables. When plugging in or unplugging the appliance, firmly grasp the plug to avoid electric shock or short circuits.
33. Keep the appliance away from water or any other liquid.
34. Do not expose the appliance to outdoor elements.
35. Do not tamper with safety switches by taping them down or otherwise obstructing them, as this poses a fire hazard.
36. It is strictly prohibited to disassemble or repair the unit yourself due to the risk of electric shock. Contact your dealer or service center if necessary.
37. Do not use the appliance near a bathtub, shower, or swimming pool.
38. Keep the appliance away from flammable objects.
39. Before connecting the appliance to the mains, verify that the voltage is correct as indicated on the product label and that your electrical installation complies with regulations.
40. Do not touch the power cord or plug with wet hands.
41. Use the appliance only for its intended purpose.
42. Keep the appliance out of the reach of children and ensure it is not used by children.
43. For safety reasons, the appliance should only be assembled and operated as outlined in this user manual. Use only manufacturer-recommended accessories.
44. Inspect the appliance for damage before use. Do not operate it if the appliance, power cord, or plug shows any signs of damage. Repairs should only be performed by qualified personnel.
45. Do not use the appliance if the power cord or plug is damaged. Do not carry the appliance by the power cord, and ensure the cord does not come into contact with hot surfaces.
46. Before each use, check that the appliance and power cord are in good condition.
47. After using the appliance, unplug it from the power outlet. Never leave the appliance unattended while plugged in.
48. During operation, keep the air vents clear to ensure proper ventilation.
49. Do not tilt the appliance more than 45 degrees during operation. Avoid directing the steam nozzle toward people, animals, or plants.
50. Use only water to fill the appliance. Do not use descaling agents, perfumes, or detergents, as they may damage the appliance.
51. **Filling the water tank:**
 - a. Unplug the appliance from the power outlet.
 - b. Press the steam button to release any residual pressure.
 - c. Allow the appliance to cool down.
 - d. Press the steam button again to release any remaining pressure.
 - e. After about 5 minutes, remove the safety cap.

52. **Warning!** The appliance heats up during operation. Do not touch hot surfaces. Use only handles or buttons. Always allow the appliance to cool down before attaching or removing accessories.
53. If the power cord is damaged, it must be replaced by the manufacturer, a service agent, or a similarly qualified person to avoid hazards.
54. Always unplug the appliance and allow it sufficient time to cool down before cleaning or maintenance.


TECHNICAL DATA

- Rated voltage: 220-240V~ 50/60Hz
- Power: 1000W
- Operating temperature: -20°C to 50°C
- Weight: 1.4 Kg
- Dimensions: 25 x 13 x 22 cm
- Operating pressure: 300 Kpa

ELECTRICAL WIRING

This appliance must be connected to a grounded mains supply socket. It is equipped with a power cable that includes a ground wire. **Warning!** Only a qualified professional should inspect your mains supply socket. Never attempt to modify or change the appliance's plug.

DESCRIPTION OF THE APPLIANCE

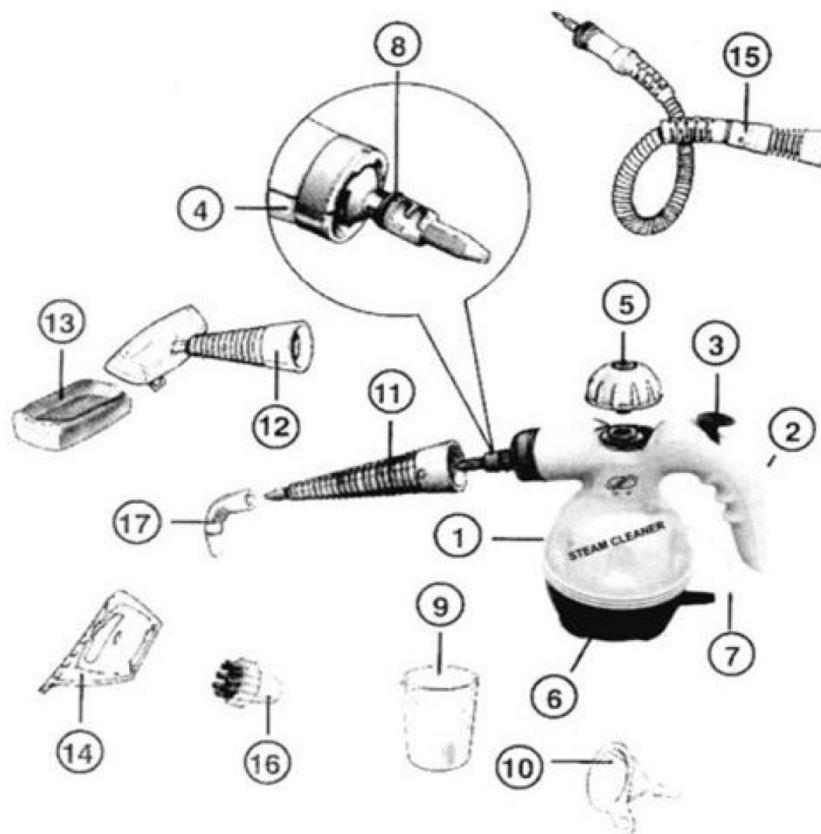


1. Housing
2. Handle
3. Steam button
4. Accessory connection
5. Safety lid
6. Power control lamp
7. Mains cable
8. Rubber sealing
9. Measuring nozzle
10. Funnel
11. Straight nozzle
12. Scrubbing brush
13. Cloth
14. Window wiper
15. Hose
16. Brush
17. Curved nozzle

CHARACTERISTICS

This appliance is versatile and highly adaptable; you only need to fill it with water to operate. It cleans, degreases, and disinfects surfaces completely without chemicals (operating above 100°C) and is suitable for use on various materials and areas, such as windows, clothing, garden furniture, bicycles, and tiles.

Warning! Never direct the appliance at people or animals. This appliance is also ideal for disinfecting refrigerators, bathrooms, deodorizing clothing, and combating dust mites in mattresses, pillows, and carpets.

ACCESSORIES

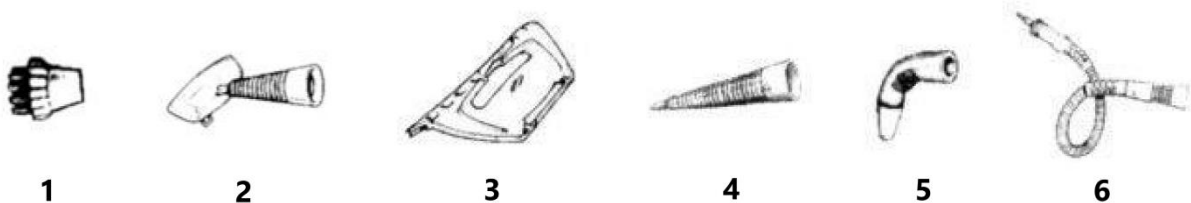

1. **Brush:** For kitchen surfaces, tiles, etc.
2. **Scrubbing brush:** For curtains and clothing. Should be used together with the cloth and hose.
3. **Window wiper:** For windows, mirrors, glass, doors, etc. **Caution!** Do not use directly on cold glass.
4. **Straight nozzle:** For joints, shelves, etc.
5. **Curved nozzle:** For toilets and hard-to-reach areas.
6. **Hose:** Ideal for extending the reach of accessories.

HOW TO USE

Caution! This appliance should not be used directly on soft plastics, untreated wood, or cold glass.


Caution! Steam may damage furniture surfaces. Perform a test run first and refer to the manufacturer's care instructions for each surface.

Assembly:

(Do not connect the appliance to the power supply until following step 1 under the "Operation" section of this manual.)


Warning! After use, press the steam button to release internal pressure before removing the safety lid.

1. Release the safety lid.
2. Fill the water tank using the provided measuring cup and funnel. It is recommended to fill the tank no more than 2/3 full. **Note:** Never use descaling agents, perfumes, or detergents, as they may damage the appliance.
3. Close the safety lid securely.
4. Attach the desired accessory (nozzle, hose, scrubbing brush, etc.) by placing it on the connection point and pressing it until it is secured by the rubber seal. Turn the accessory clockwise until it locks into place (see illustration).

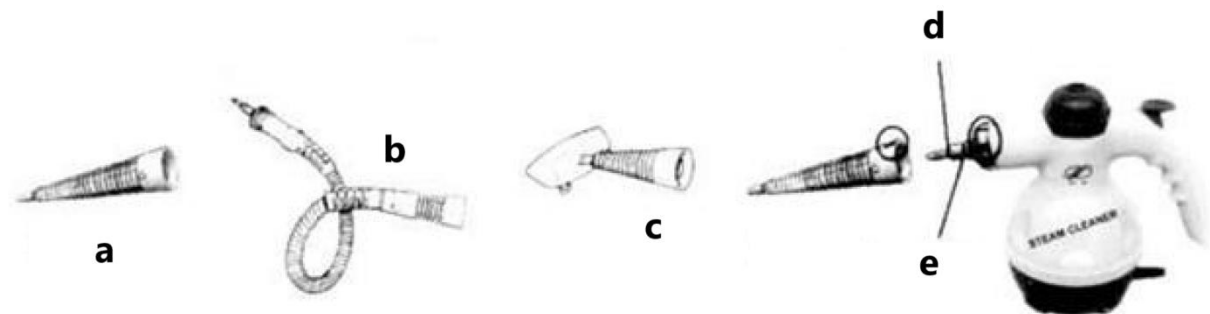

- a. Nozzle
- b. Hose
- c. Scrubbing brush
- d. Connection
- e. Sealing


5. **Brush and Curved Nozzle:** Both the brush and curved nozzle can be attached directly to the appliance or used with the hose or straight nozzle (see illustration).

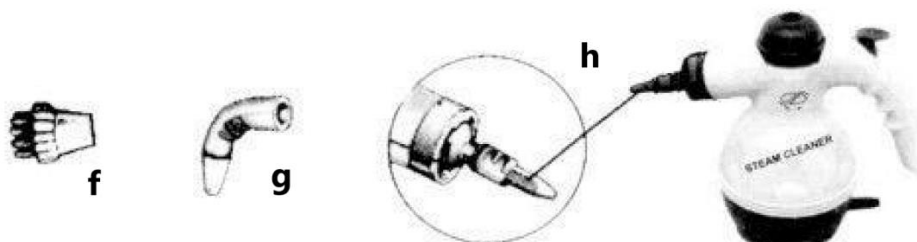

- f. Brush
- g. Curved nozzle
- h. 6-square connection

6. **Window Wiper:**

Warning! Do not use the appliance directly on cold glass. The window wiper must be attached to the scrubbing brush. First, assemble the scrubbing brush on the appliance or hose. Then, remove the cloth from the scrubbing brush and connect the window wiper to the brush using the two hinges (see illustration). The window wiper can be easily detached by loosening the hinges again.

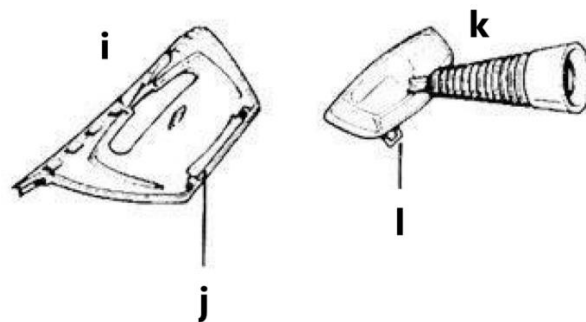

- i. Window wiper
- j. Hinge
- k. Scrubbing brush
- l. Hook

Operation:

1. Connect the appliance to the mains power. The control lamp will light up. Once preheating is complete (approximately 3-4 minutes), the control lamp will turn off. Note that the appliance cannot be turned on during the preheating process. Once heated, switch the appliance on and move it slowly over the surface to be cleaned. Maintain a distance of 2-3 cm between the nozzle and the surface. It is normal for the control lamp to turn on and off during operation, as the thermostat automatically controls the heating element. **Warning!** Do not tilt the appliance more than 45° during use. Never point the appliance at people, animals, or plants.
2. **Refilling the Water Tank:** Unplug the appliance from the power socket. Press the steam button to release all internal pressure. Wait approximately 3 minutes and then slowly release the safety lid. Once the appliance has cooled, fill the water tank up to 2/3 full using the provided funnel and measuring cup. Close the safety lid and reconnect the appliance to the mains power. **Warning!** Ensure internal pressure has been fully released before removing the safety lid.
3. After use, unplug the appliance and empty the water tank.
4. **Descaling:** To maintain the appliance's performance, it is recommended to descale it monthly. Do not use vinegar or any descaling agents—only fill the tank with water. Shake the appliance by hand and then empty the tank. **Warning!** Never immerse the appliance in water.

MAINTENANCE

This appliance does not require special maintenance under normal operating conditions.

Do not attempt to repair the appliance yourself. Repairs to electrical appliances must be carried out by qualified personnel.

TROUBLESHOOTING

Problem	Cause	Advice
Appliance does not start	Appliance not plugged in correctly	Ensure the appliance is properly connected to the mains supply.
	Damaged mains supply socket	Check the socket.
	Blown fuse	Replace the fuse.
	No water in the tank	Fill the water tank.
No steam	No water in the tank	Fill the water tank.
Water leaks from the nozzle	Too much water in the tank	Reduce the water level.
	Appliance is too strongly tilted	Hold the appliance correctly.
	Appliance is not hot enough	Allow the appliance to heat up.
Water boils when filling	Water tank is still very hot	Let the appliance cool down before refilling.
		Use the funnel when filling the water tank.
Accessory comes loose	Accessory not attached correctly	Reattach the accessory securely.
Other problems	Appliance is damaged	Contact customer service.

INSTRUCTIONS FOR RECYCLING AND DISPOSAL:



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.



A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.