EN: RAZELIN – USER MANUAL

PRODUCT OVERVIEW

RAZELIN is a rechargeable electric foil shaver for shaving facial hair. It has a removable blade holder with a floating foil, is water-resistant to IPX6 and switches off automatically after 20 minutes of operation.

PRODUCT SPECIFICATIONS


Product name: RAZELIN
Model number: T9
Battery: 3.7 V, 500 mAh, 1.85 Wh
Charging method: USB Type-C
Input rating: 5V ⎓ 1A
Rated power: 5 W
Water resistance: IPX6
Automatic shut-off: 20 minutes

PACKAGE CONTENTS

- RAZELIN shaver with protective cover × 1
- Cleaning brush × 1
- USB charging cable × 1
- User manual × 1

A USB power adapter is not included.

PARTS AND CONTROLS

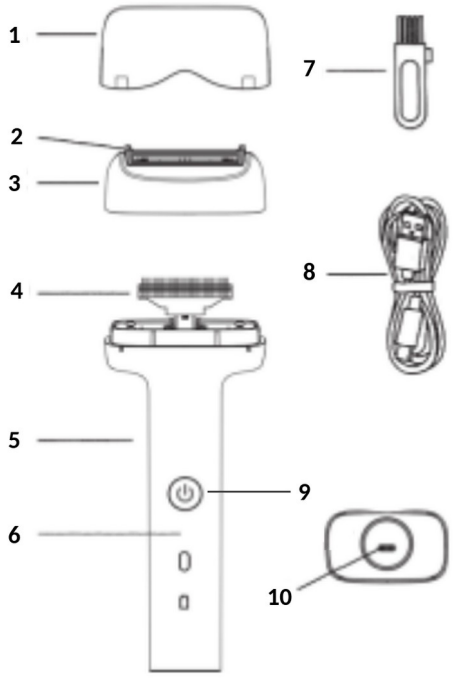


1. **Protective cover**
2. **Foil**
3. **Blade holder**
4. **Inner blade**
5. **Body**
6. **Indicator lights**
7. **Cleaning brush**
8. **USB charging cable**
9. **On/Off button**
10. **USB Type-C charging port**

BEFORE USE

Read this manual carefully before using the device. When you use the device for the first time, your skin may become slightly red or tingle. This is normal. Your skin needs about a week to get used to the shaver.

OPERATING INSTRUCTIONS

Shaving

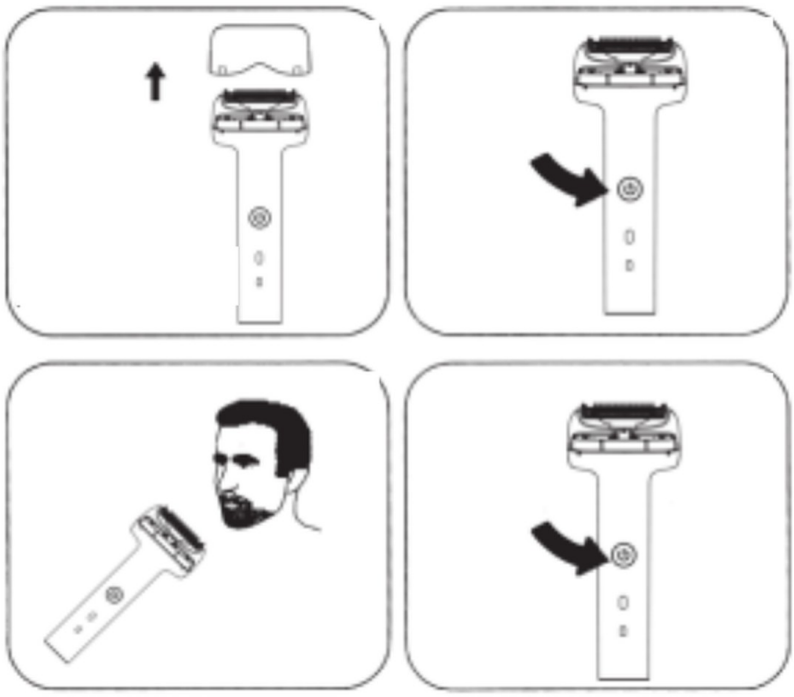

1. Remove the **protective cover**.
2. Press the **On/Off button** to switch the device on.
3. Place the **foil** on dry skin and move the device slowly against the direction of hair growth in straight strokes. Do not press the **foil** hard against the skin. Moving the device too fast gives poorer results.
4. When you have finished, press the **On/Off button** to switch the device off and put the **protective cover** back on.

For the best results, shave on dry skin.

The device switches off automatically after 20 minutes of operation. When the battery is low, both indicator lights flash three times at the same time and the device switches off. Charge the battery before using the device again.

CHARGING

Connect the USB charging cable to the USB Type-C charging port on the device and connect the other end to a USB power adapter with an output of 5V ⎓ 1A. The charging indicator light flashes while the device is charging and stays on when the battery is fully charged.

Charge the device only at temperatures between 0 °C and 40 °C. Do not leave the device connected to the charger for long periods.

BASIC SAFETY INSTRUCTIONS


- Charge the device only with the supplied charging cable and a USB power adapter with an output of 5V ⎓ 1A that complies with the applicable EU safety standards. Do not use accessories that were not supplied with the device.
- The device is rated IPX6, which means it is protected against strong jets of water. Do not immerse the device in water.
- Keep the USB power adapter and the charging cable dry. Do not charge the device while it is wet.
- Do not use a damaged charging cable. Replace it only with an equivalent cable from the manufacturer or contact our customer service.
- Do not press the foil hard against the skin. This can scratch the skin and wear out the foil.
- Do not use the device if the foil is damaged.
- If the device gives off an unusual odour, becomes unusually hot or makes unusual noises during charging or use, disconnect it and stop using it immediately. Contact our customer service.
- Do not modify the device and do not attempt to repair it yourself.

BATTERY SAFETY

- The device contains a built-in rechargeable battery. Do not open the device and do not attempt to remove, disassemble or replace the battery yourself.
- Charging at temperatures below 0 °C or above 40 °C or charging continuously for long periods shortens the battery life.
- For further battery safety information, see the separate safety instructions supplied with the device.

CLEANING AND STORAGE

Clean the device after each use. Switch the device off and disconnect the charging cable before cleaning.

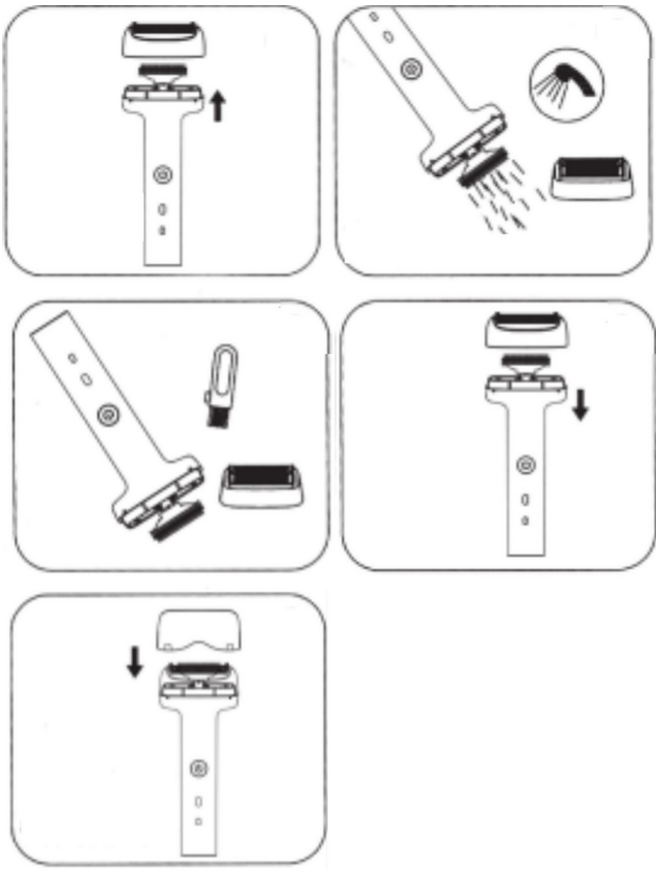

1. Pull the **blade holder** upwards to remove it from the **body**.
2. Rinse the **blade holder** and the head of the **body** under running water.
3. Clean the **inner blade**, the **blade holder** and the **body** with the **cleaning brush**. Do not touch the surface of the **foil** with the brush.
4. Put the **blade holder** back on the **body**. Make sure it faces the right way. Do not fit it the wrong way round.
5. Put the **protective cover** back on.

If the body is dirty, wipe it with a soft cloth dipped in a mild, neutral detergent. Do not use alcohol, petrol or other chemicals. Store the device with the protective cover on.

TROUBLESHOOTING

Problem	Possible cause and solution
The device does not shave well, runs weakly or the battery runs down quickly.	The foil is dirty or damaged, or the battery is low. Clean the blade holder and charge the battery. If the foil is damaged, stop using the device and contact our customer service.
The device does not start.	The battery is empty. Charge the battery.
The device does not charge or does not work when switched on.	The device, charging cable or power adapter is damaged, or the switch is faulty. Stop using the device and contact our customer service.

If the problem persists, switch the device off and contact our customer service.

INSTRUCTIONS FOR RECYCLING AND DISPOSAL:

The device contains a built-in battery. Do not remove the battery yourself. At the end of the product's life, contact our customer service to have the battery removed. After removal, prevent short circuits between the battery terminals and do not store or transport the battery together with metal objects such as necklaces or hair clips.



This label means that the product cannot be disposed of as other household waste throughout the EU. To prevent potential damage to the environment or human health from uncontrolled waste disposal. Recycle responsibly to promote the sustainable use of material resources. If you want to return a used device, use the drop-off and collection system, or contact the retailer from whom you bought the product. The retailer can accept the product for environmentally safe recycling.

CE

A declaration by the manufacturer that the product complies with the requirements of the applicable EU Directives.